FOR EARTHWORK DEVELOPMENT ONLY

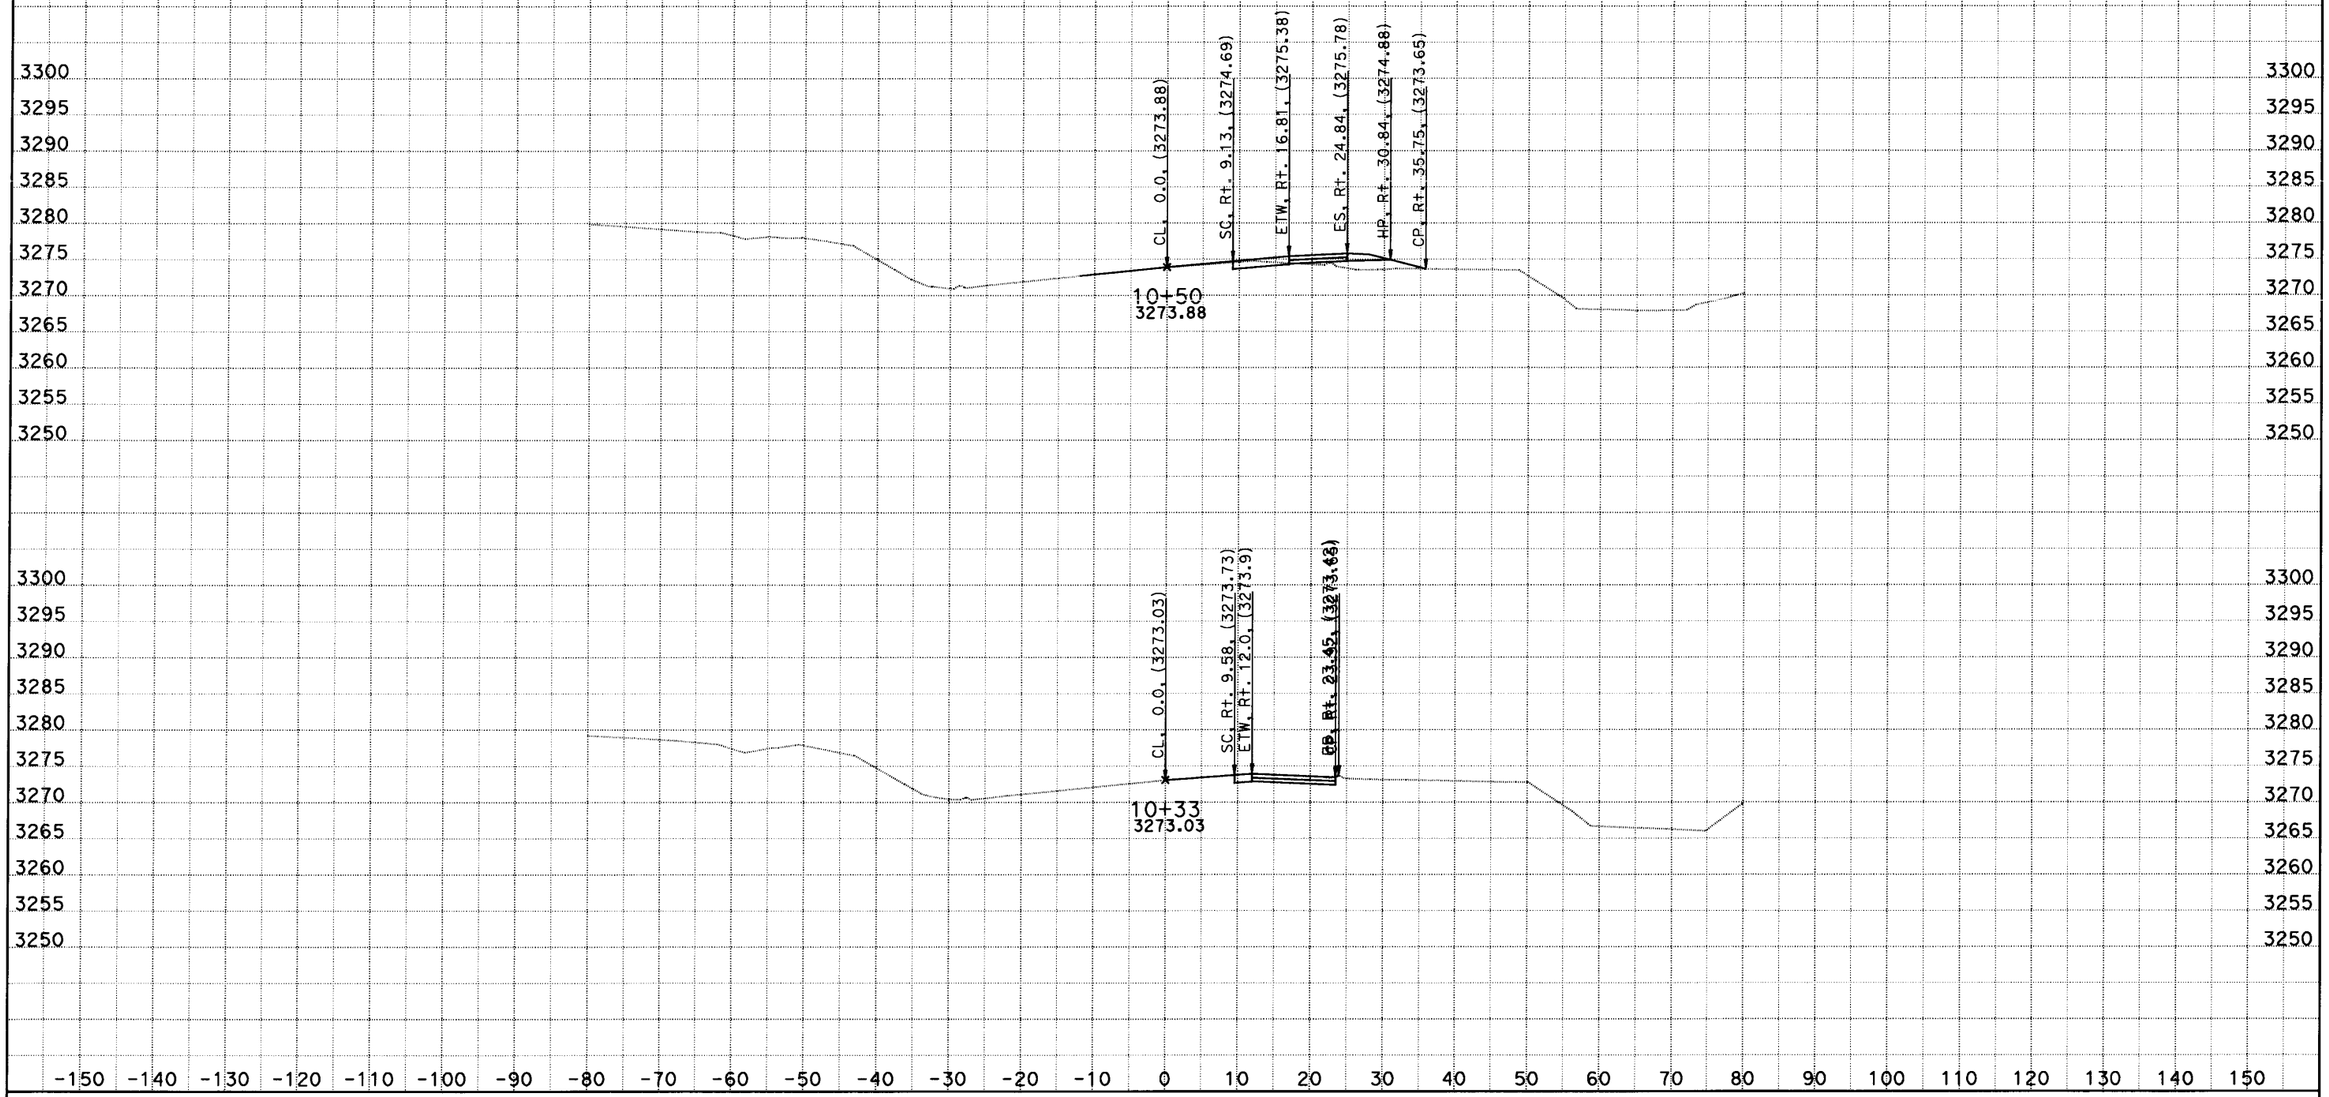

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 1 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

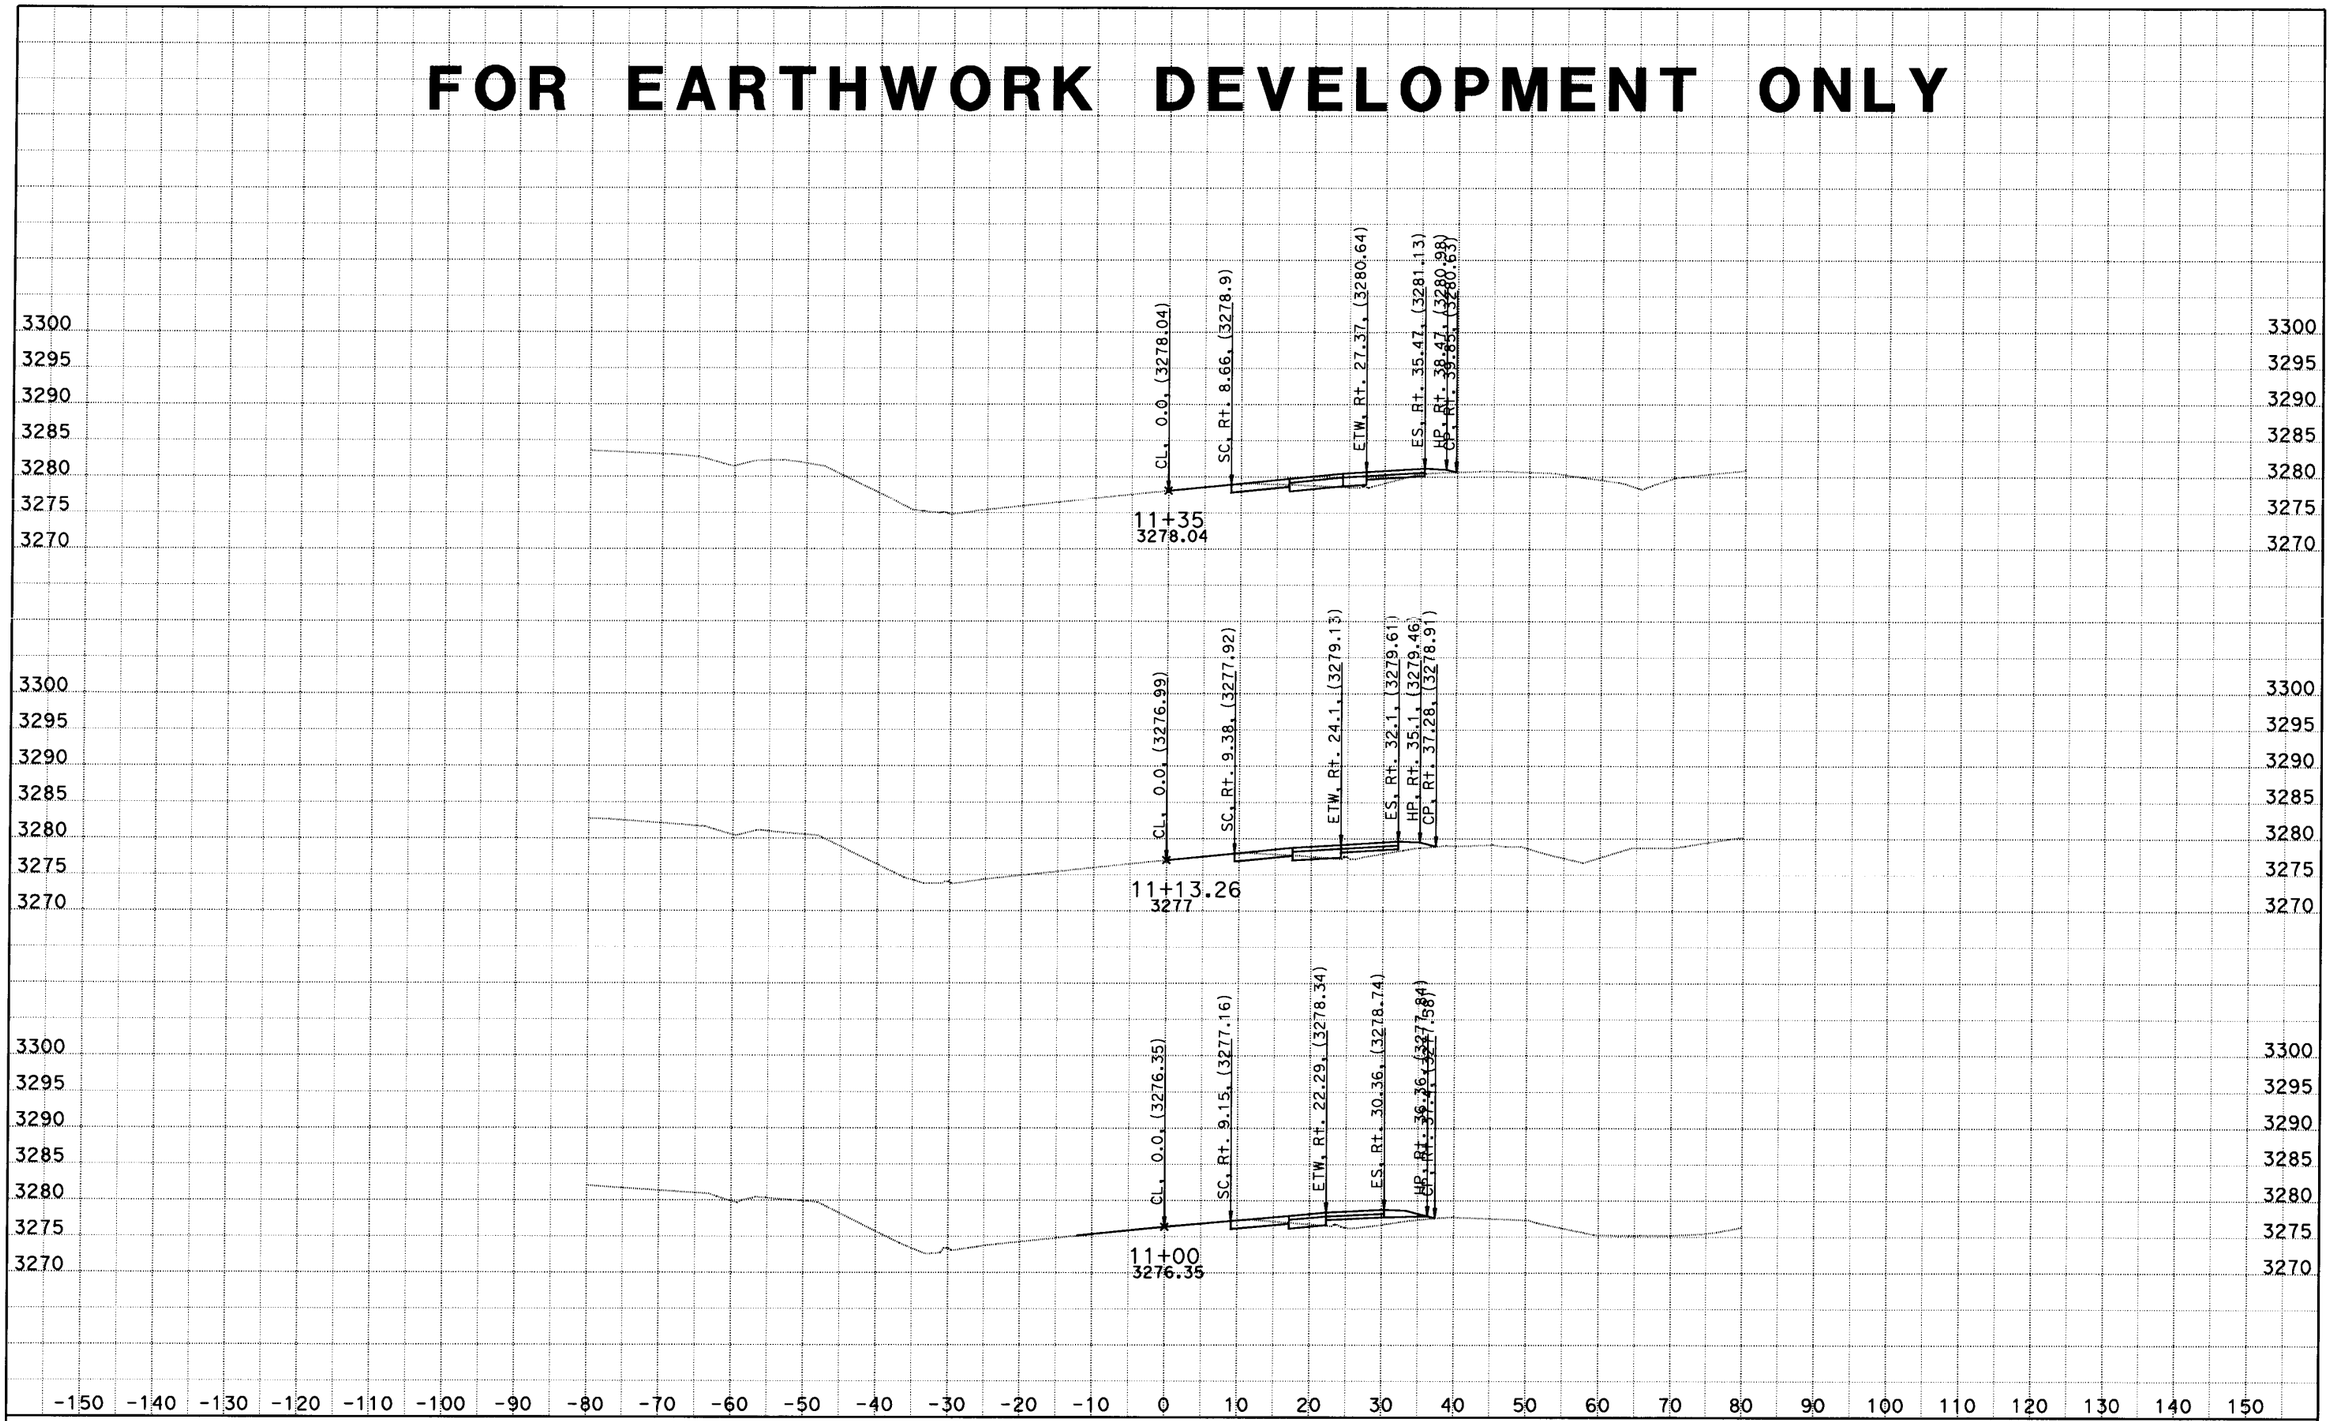

10 Tuo 120 EA 0P1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 2 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

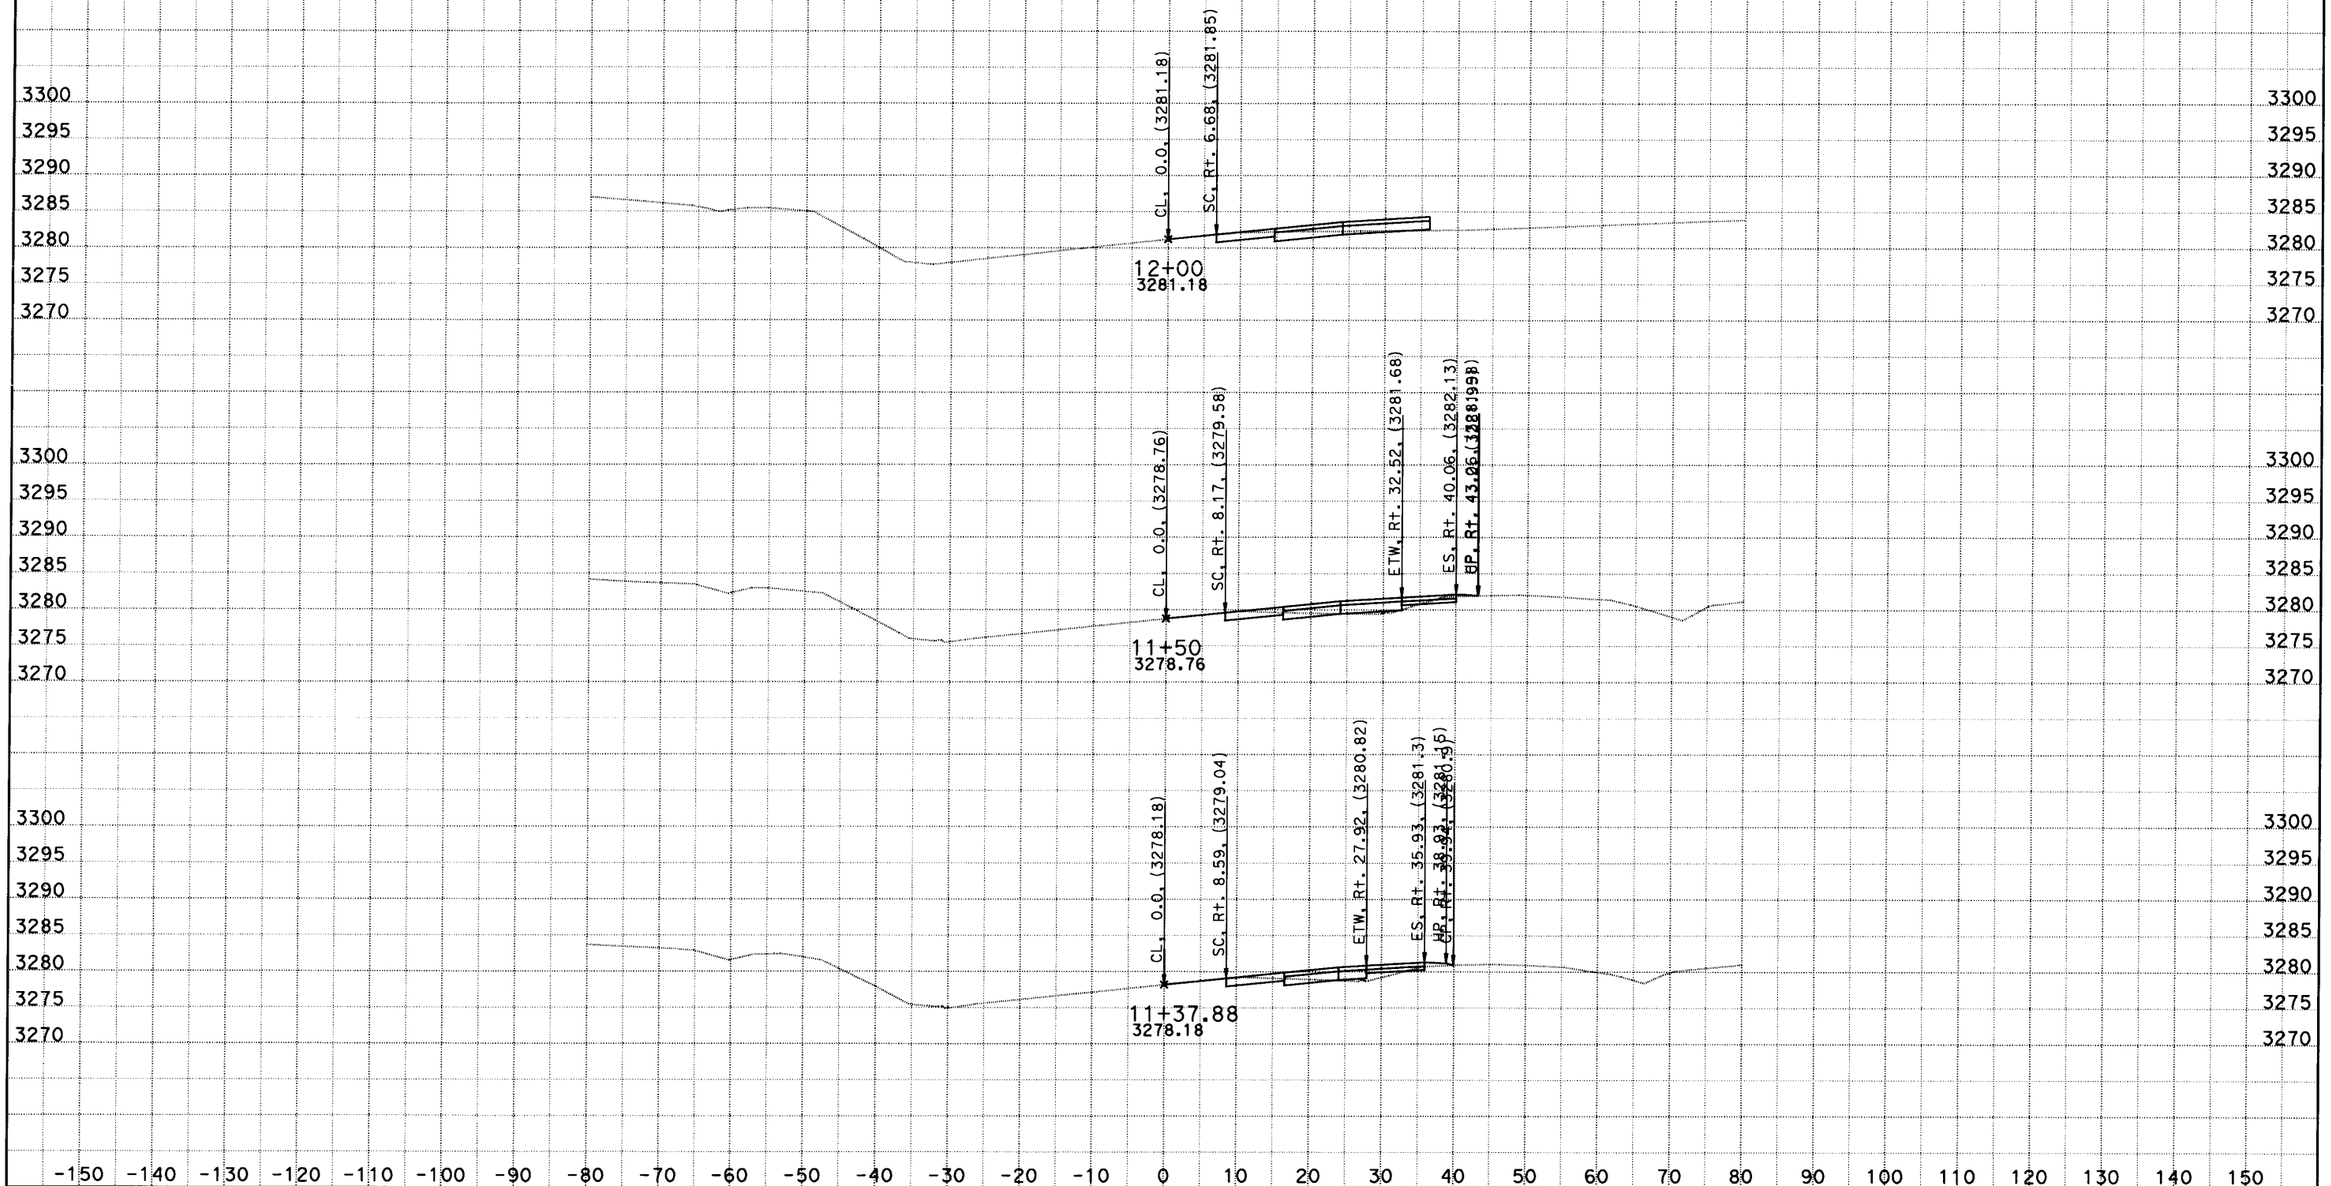

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 3 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

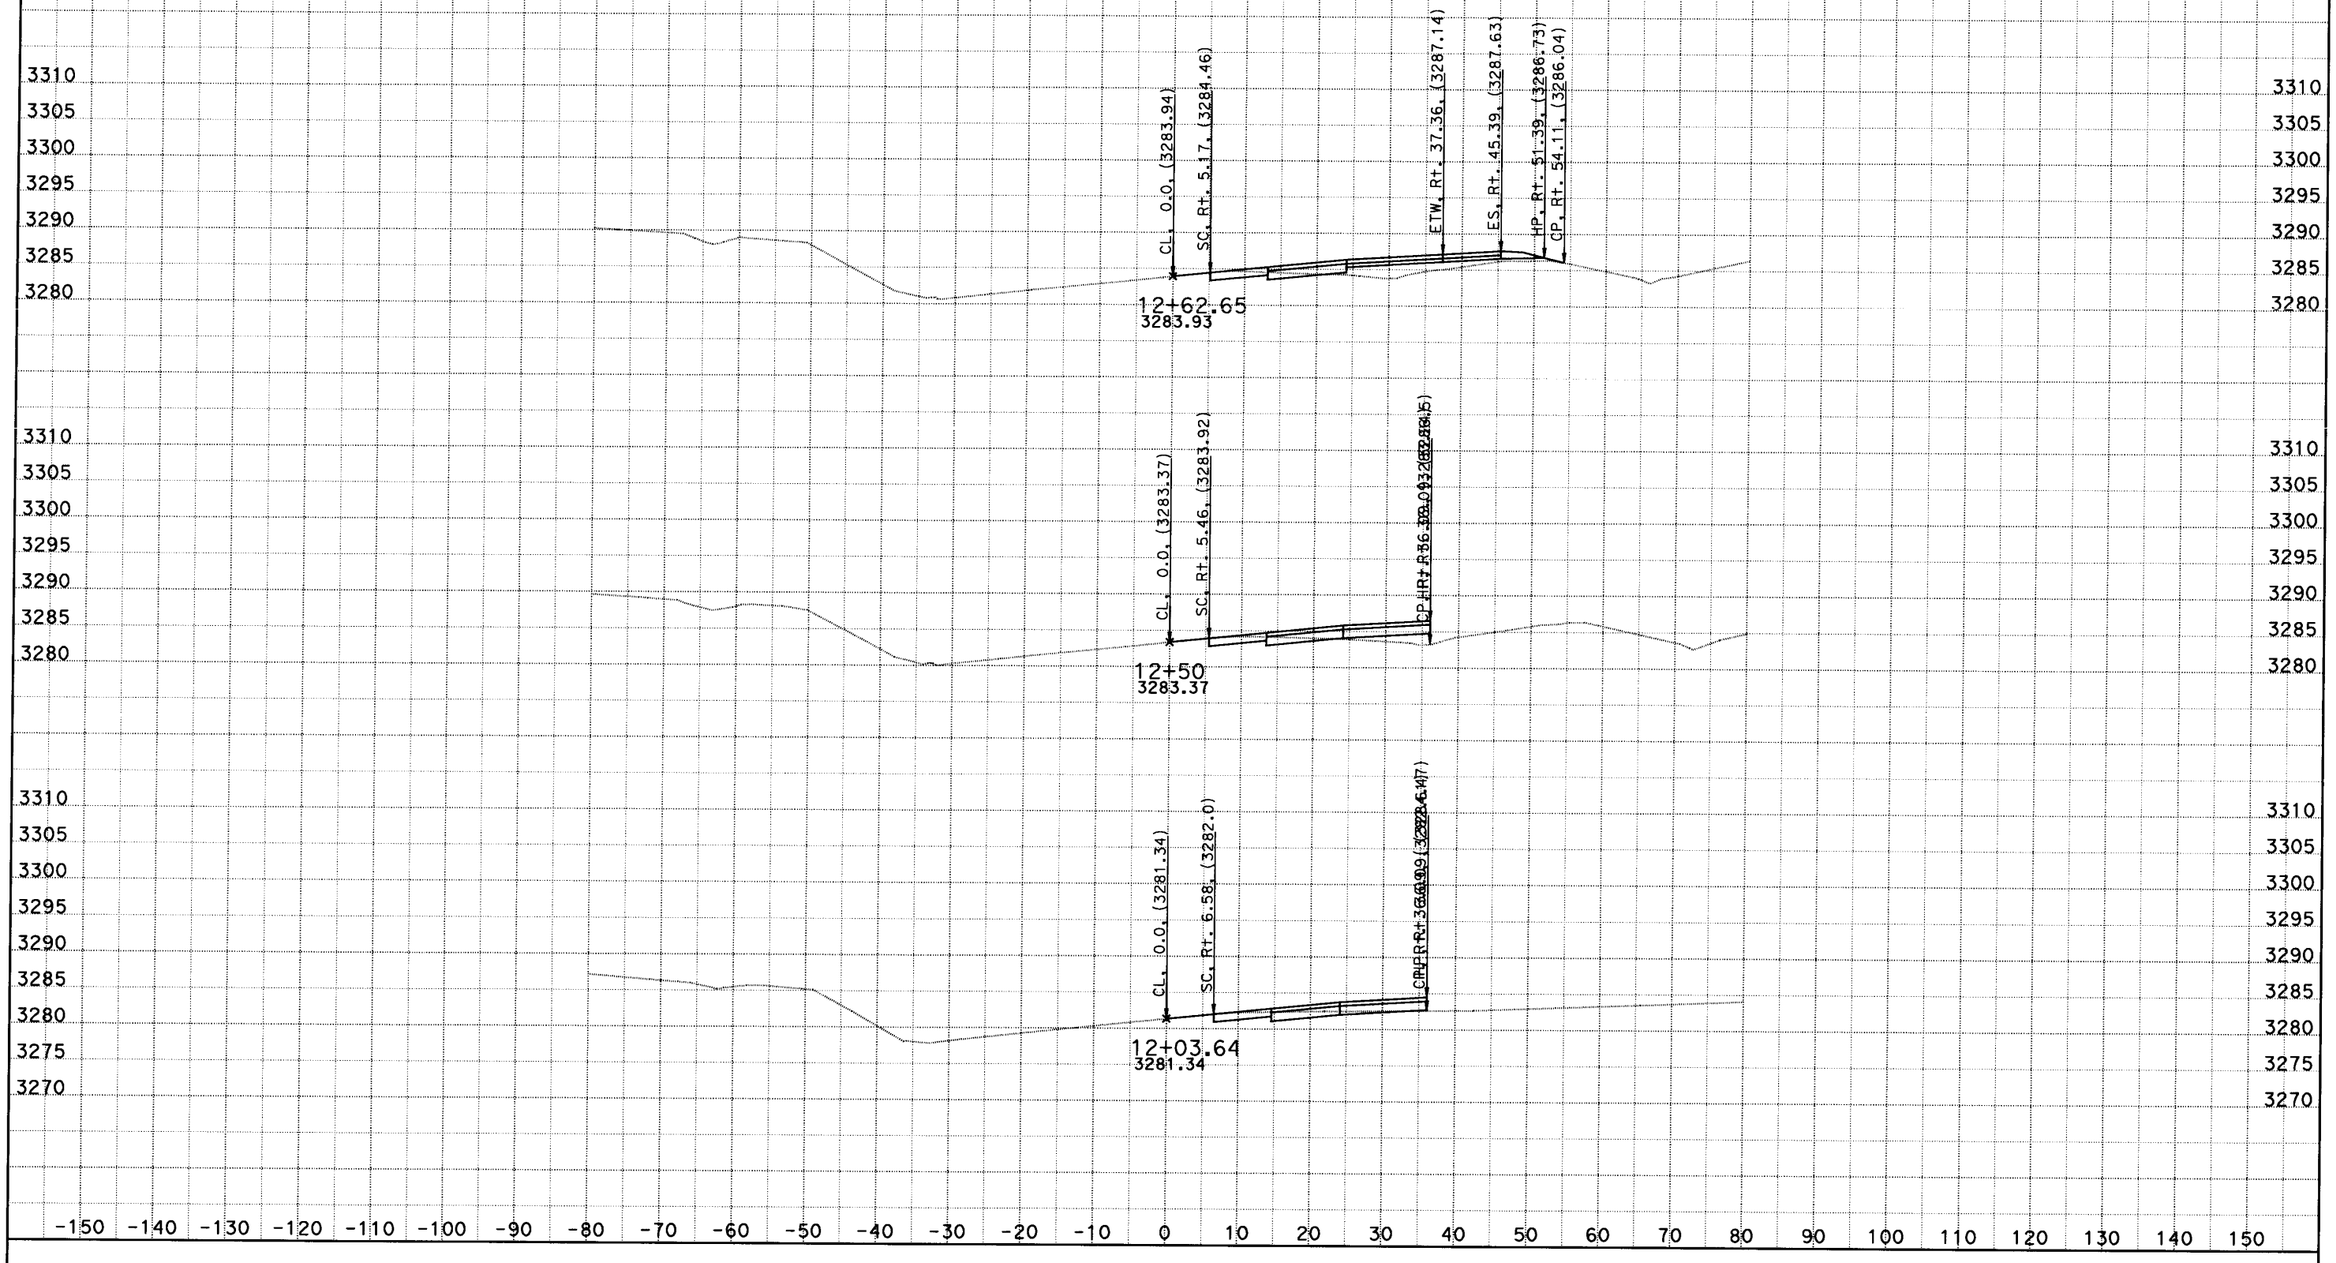

10 Tuo 120 EA 0P1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 4 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

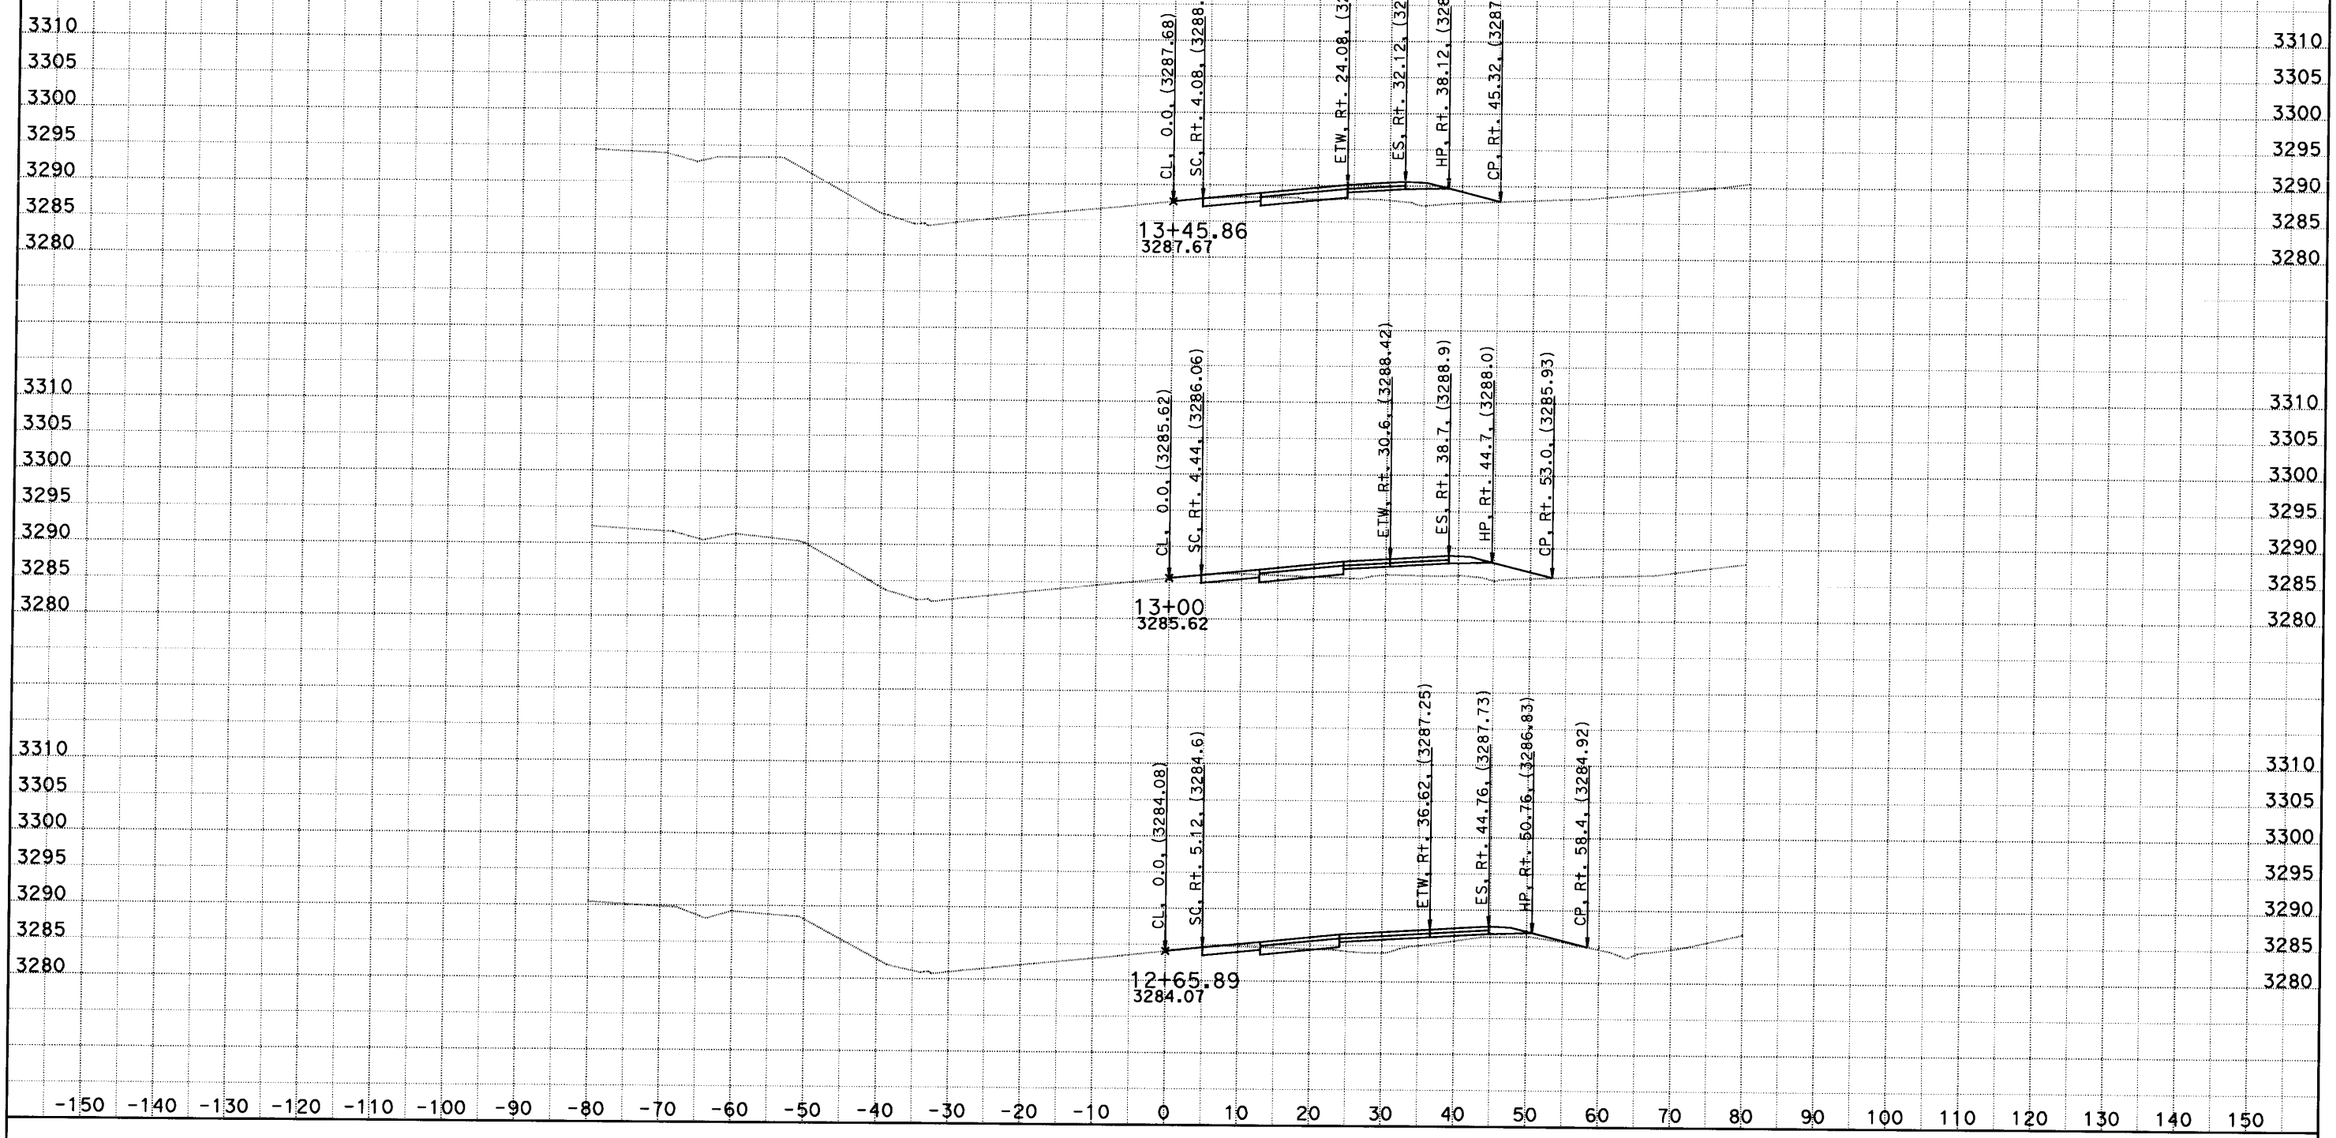

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 5 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

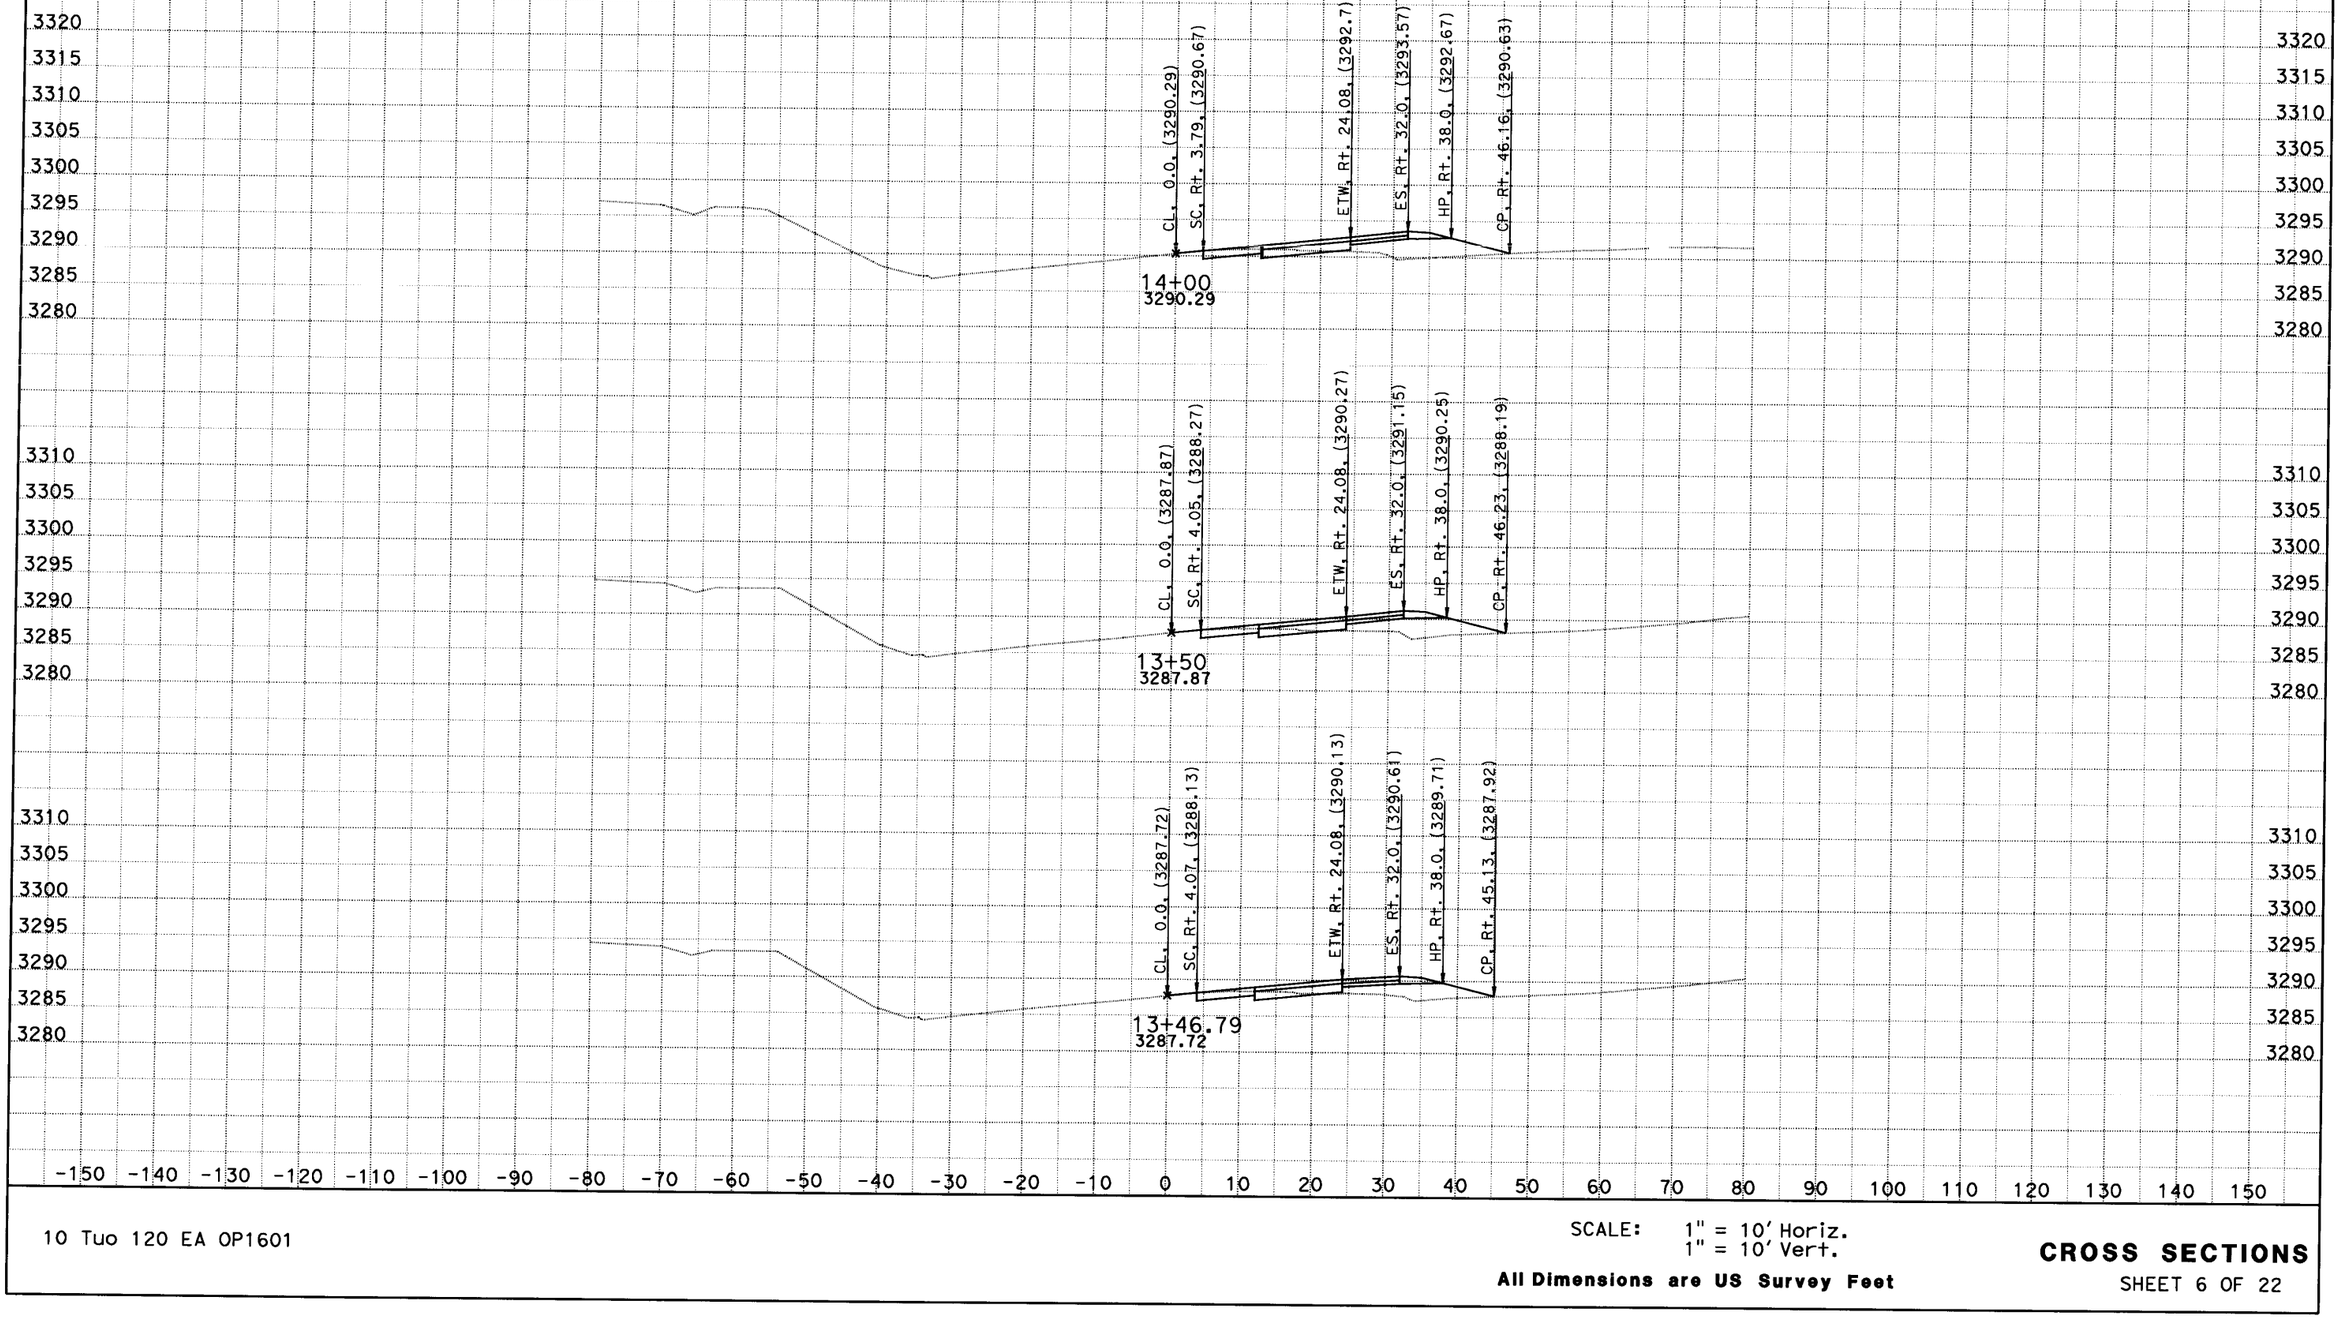

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 6 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

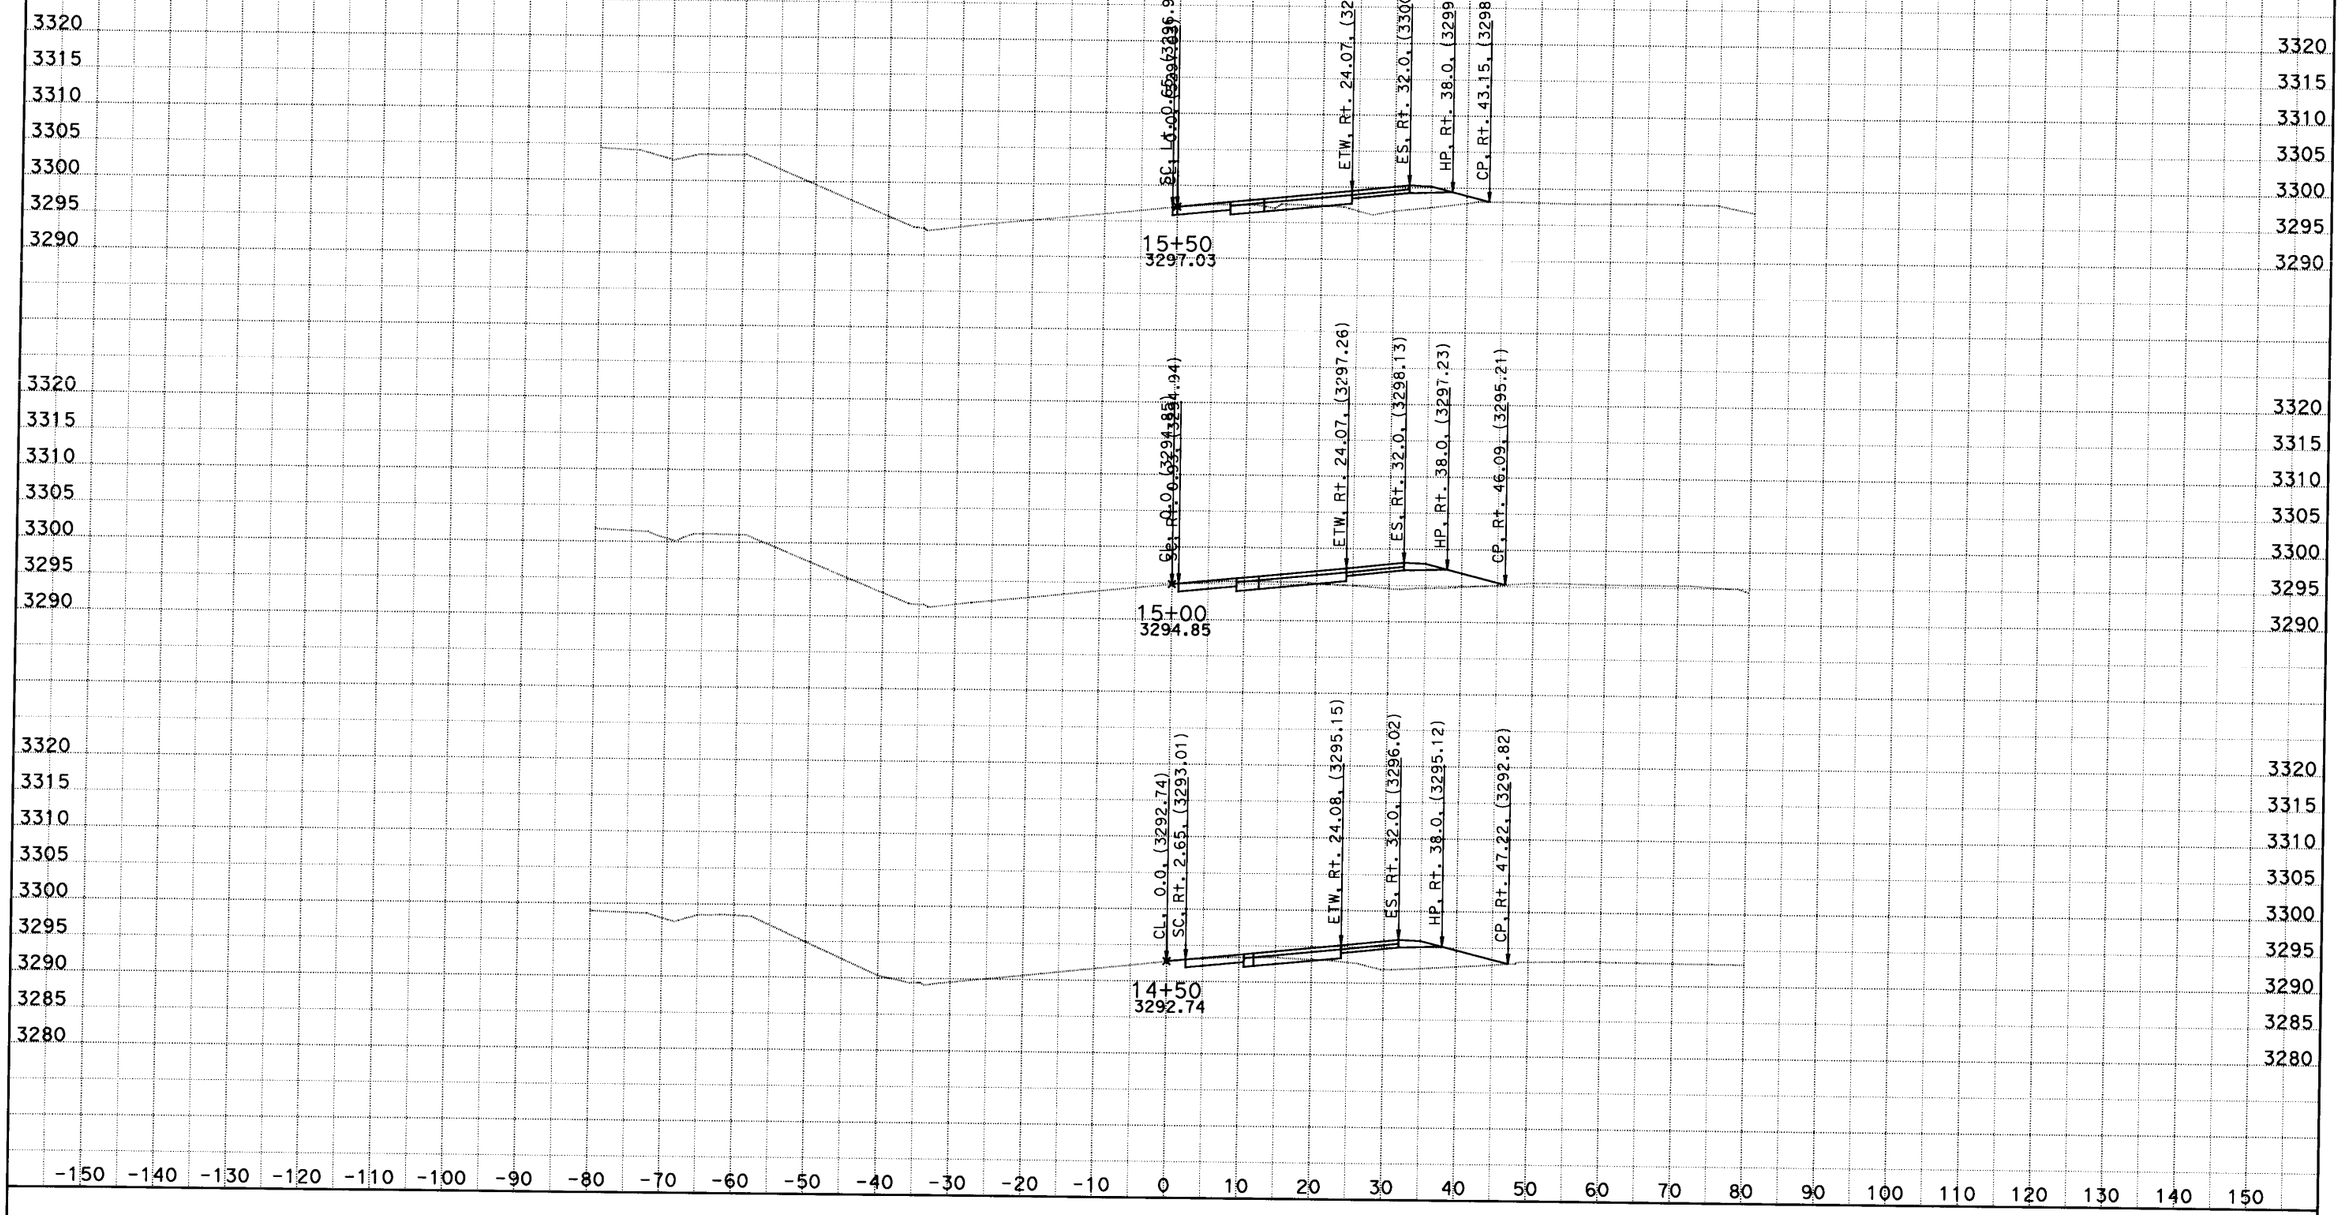

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 7 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

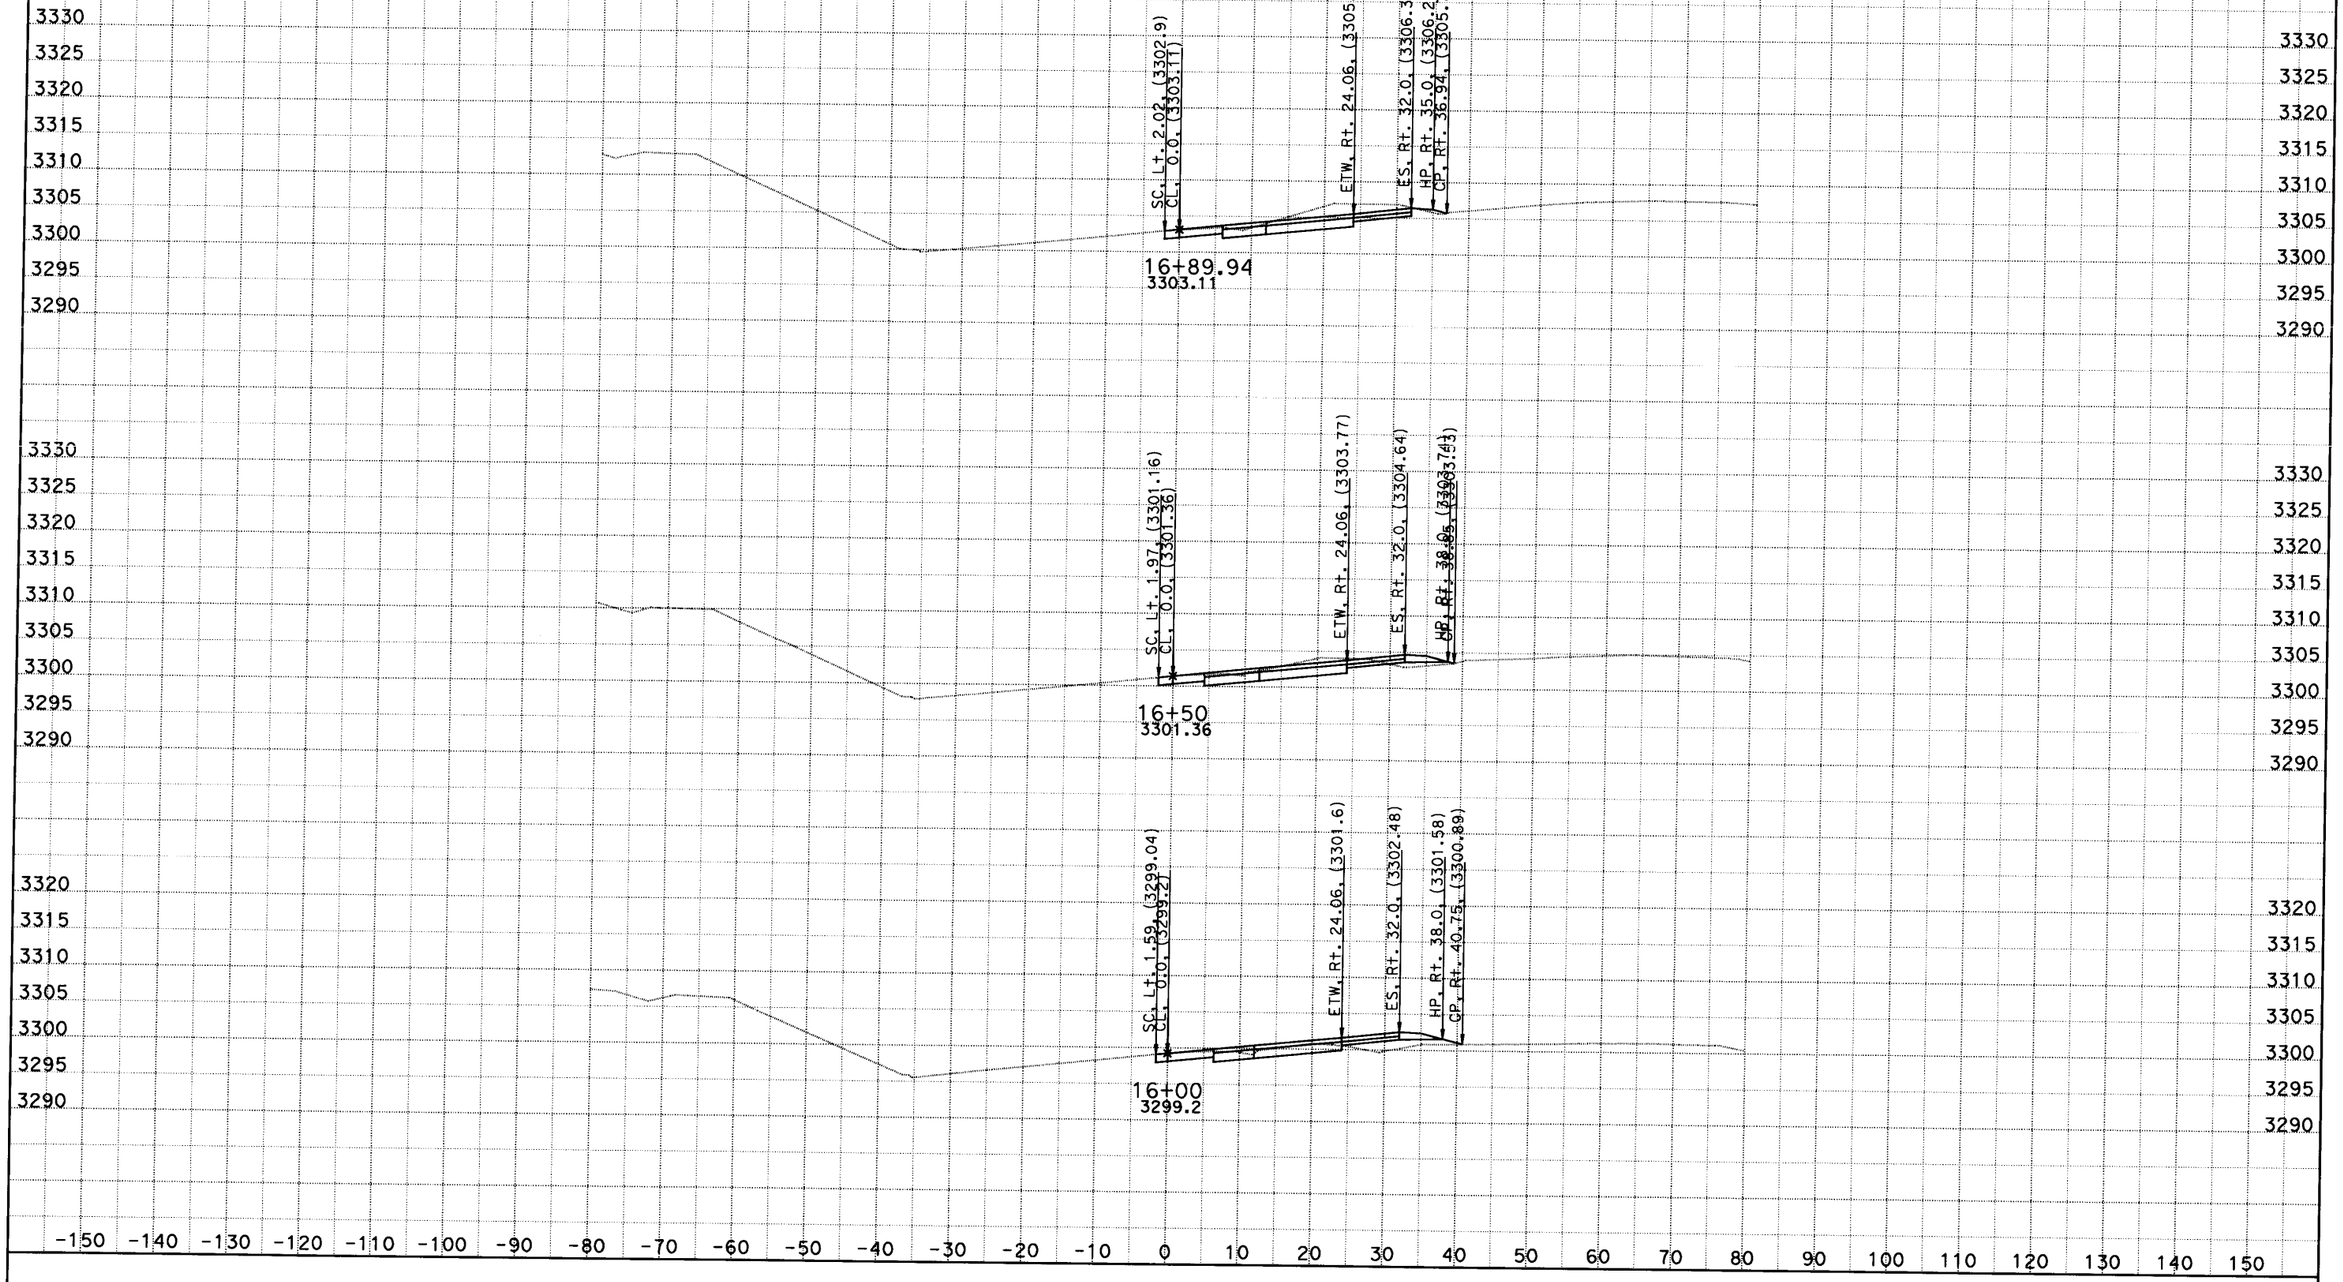

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 8 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

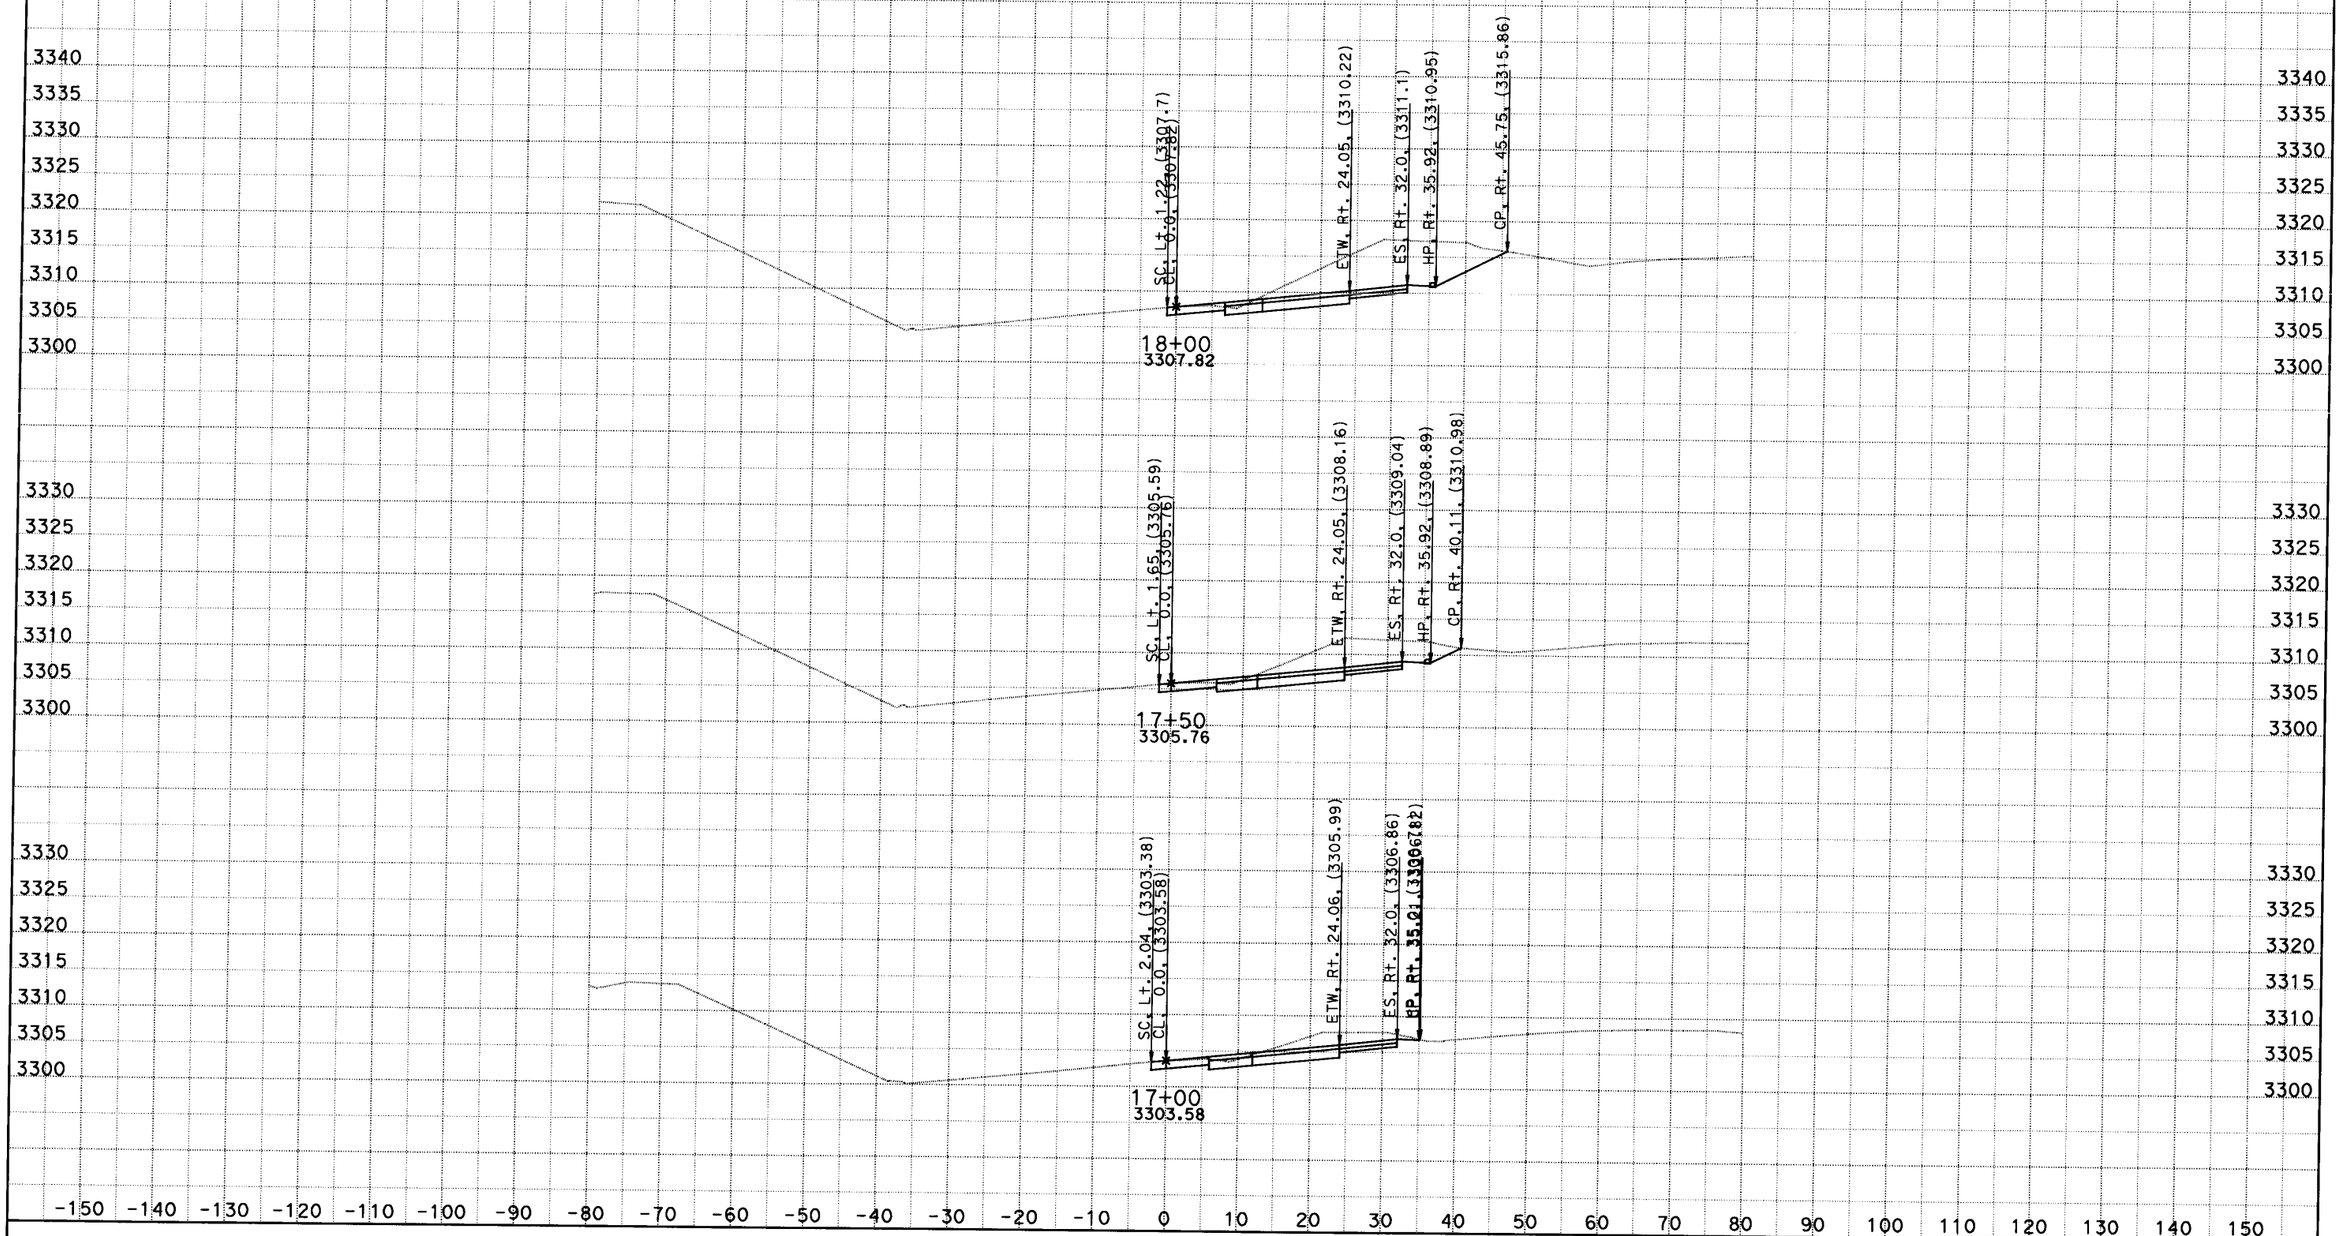

10 Tuo 120 EA 0P1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 9 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

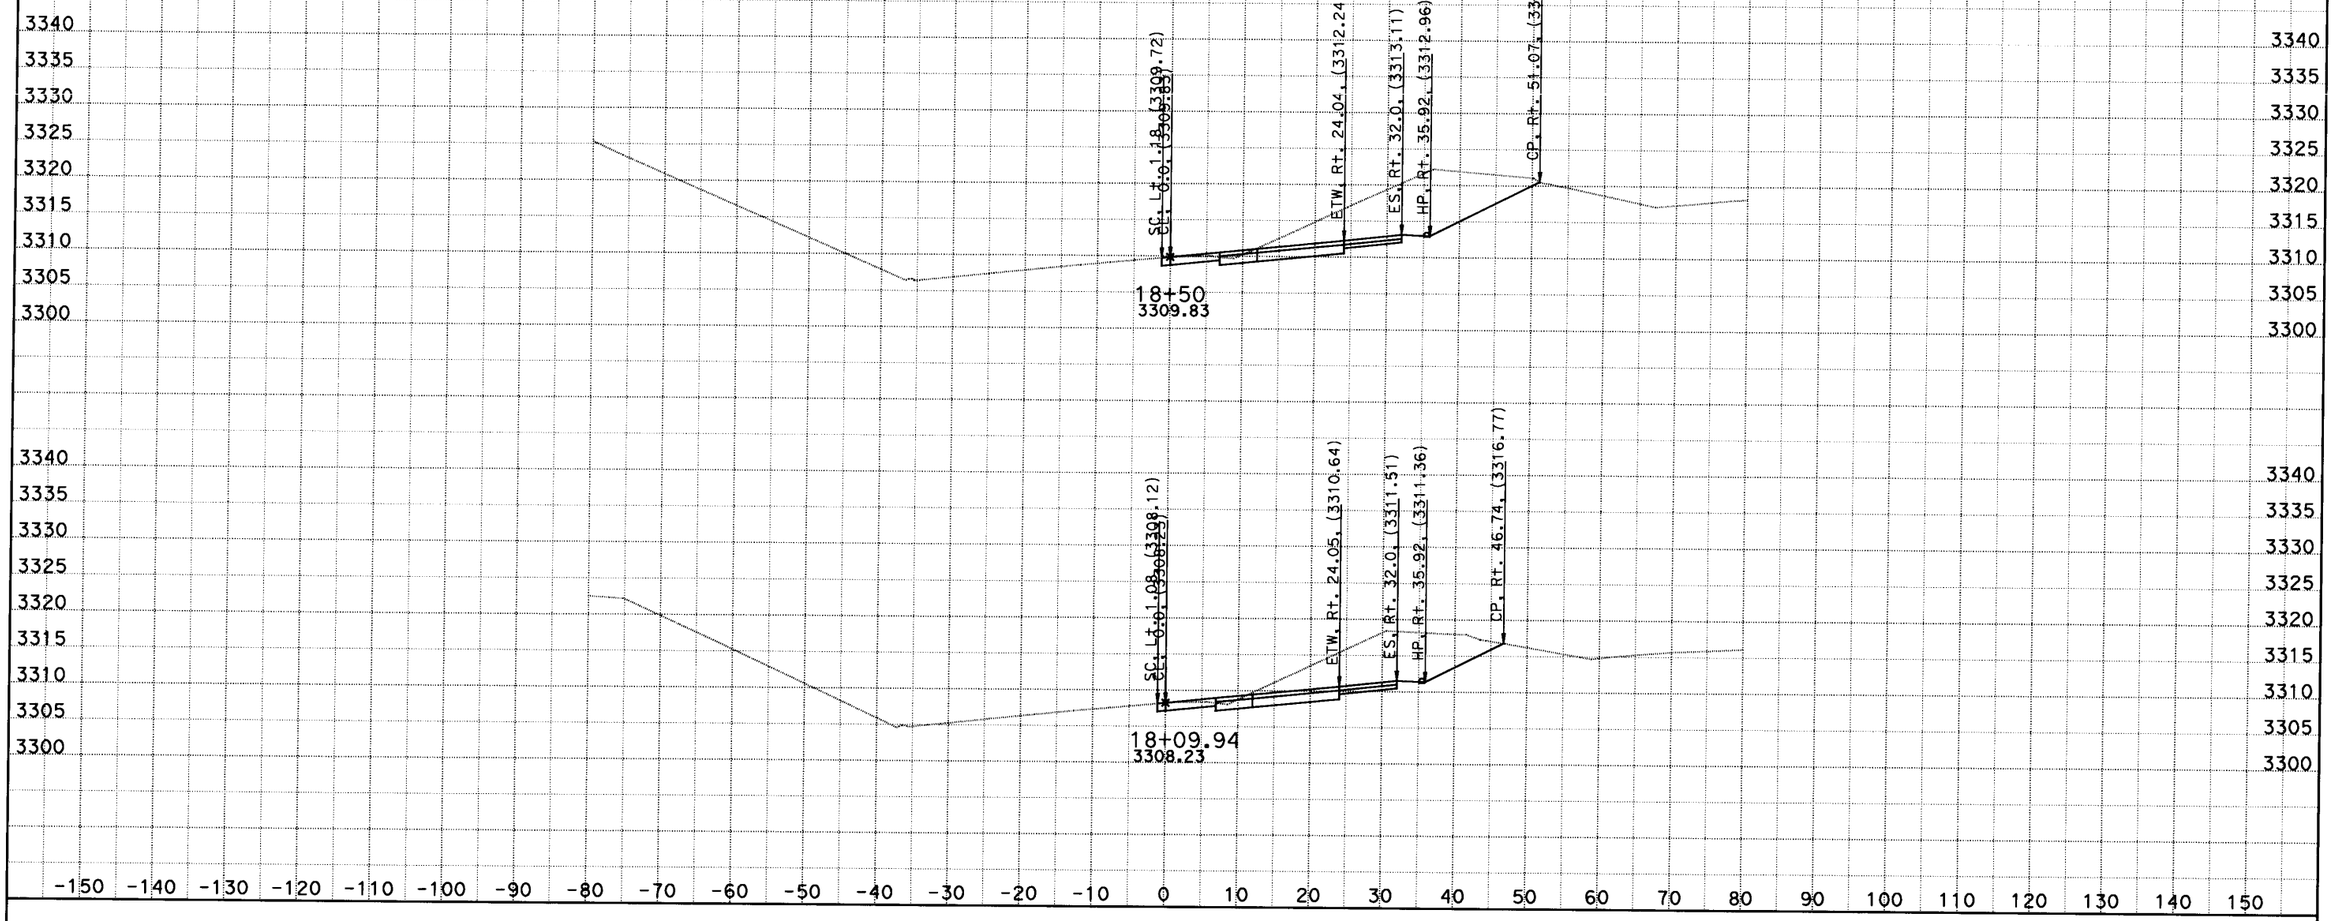

10 Tuo 120 EA 0P1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 10 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

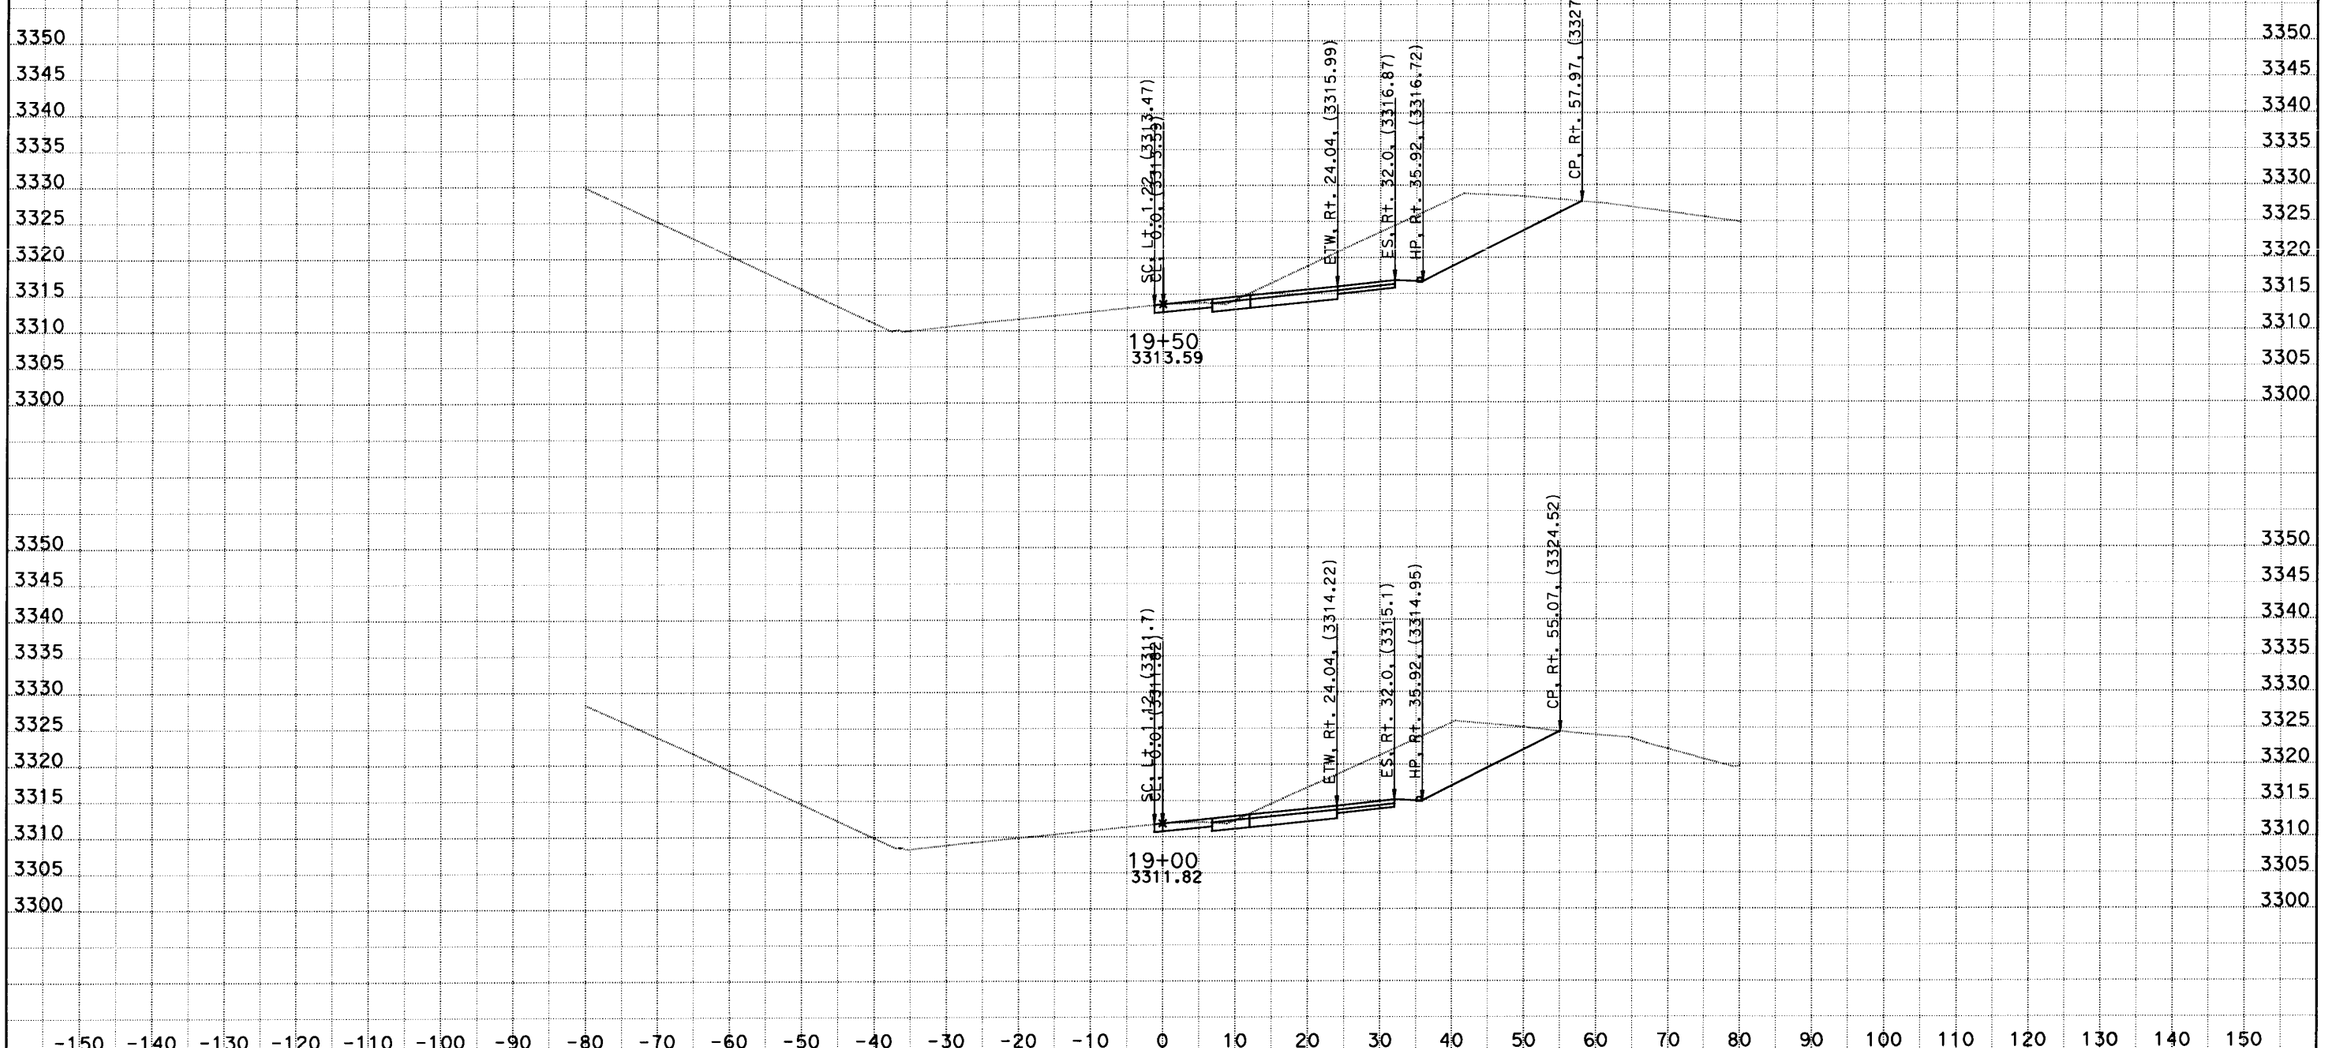

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 11 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

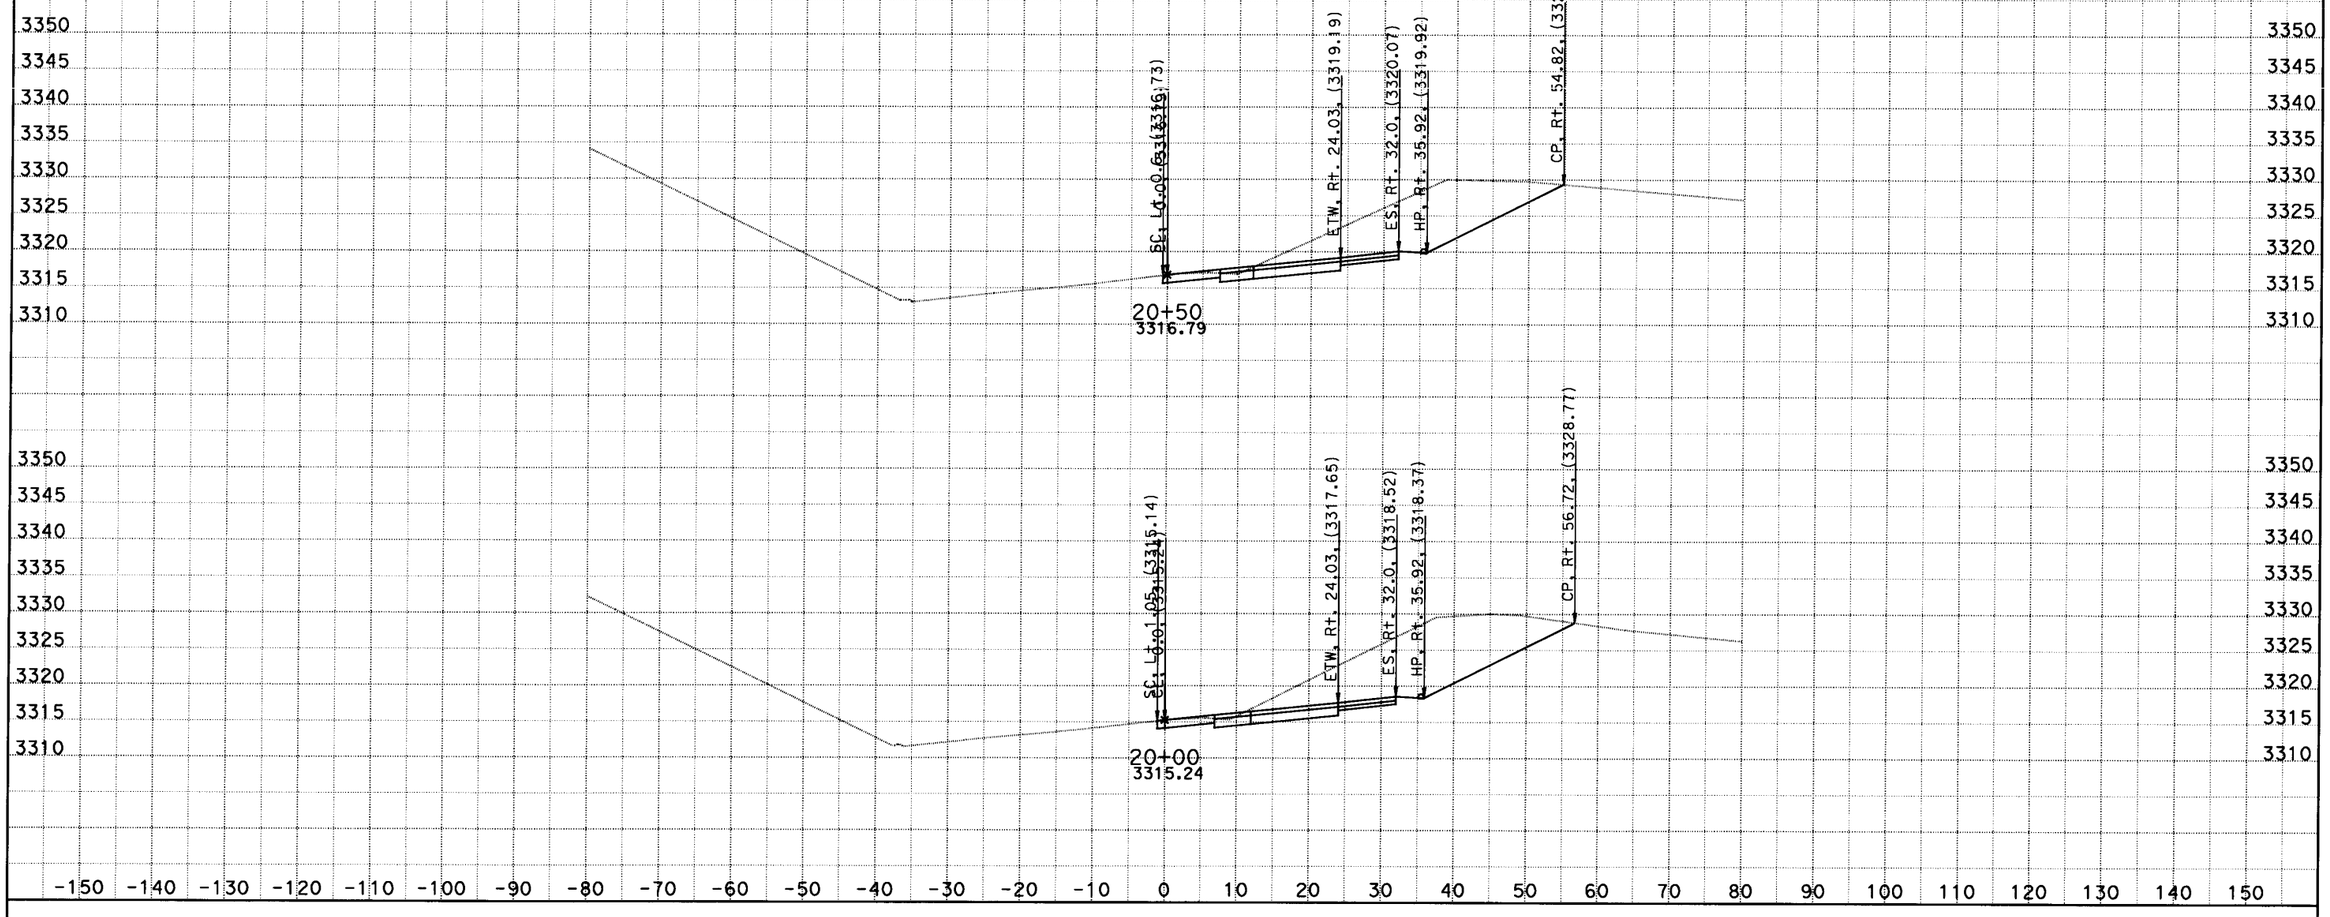

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 12 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

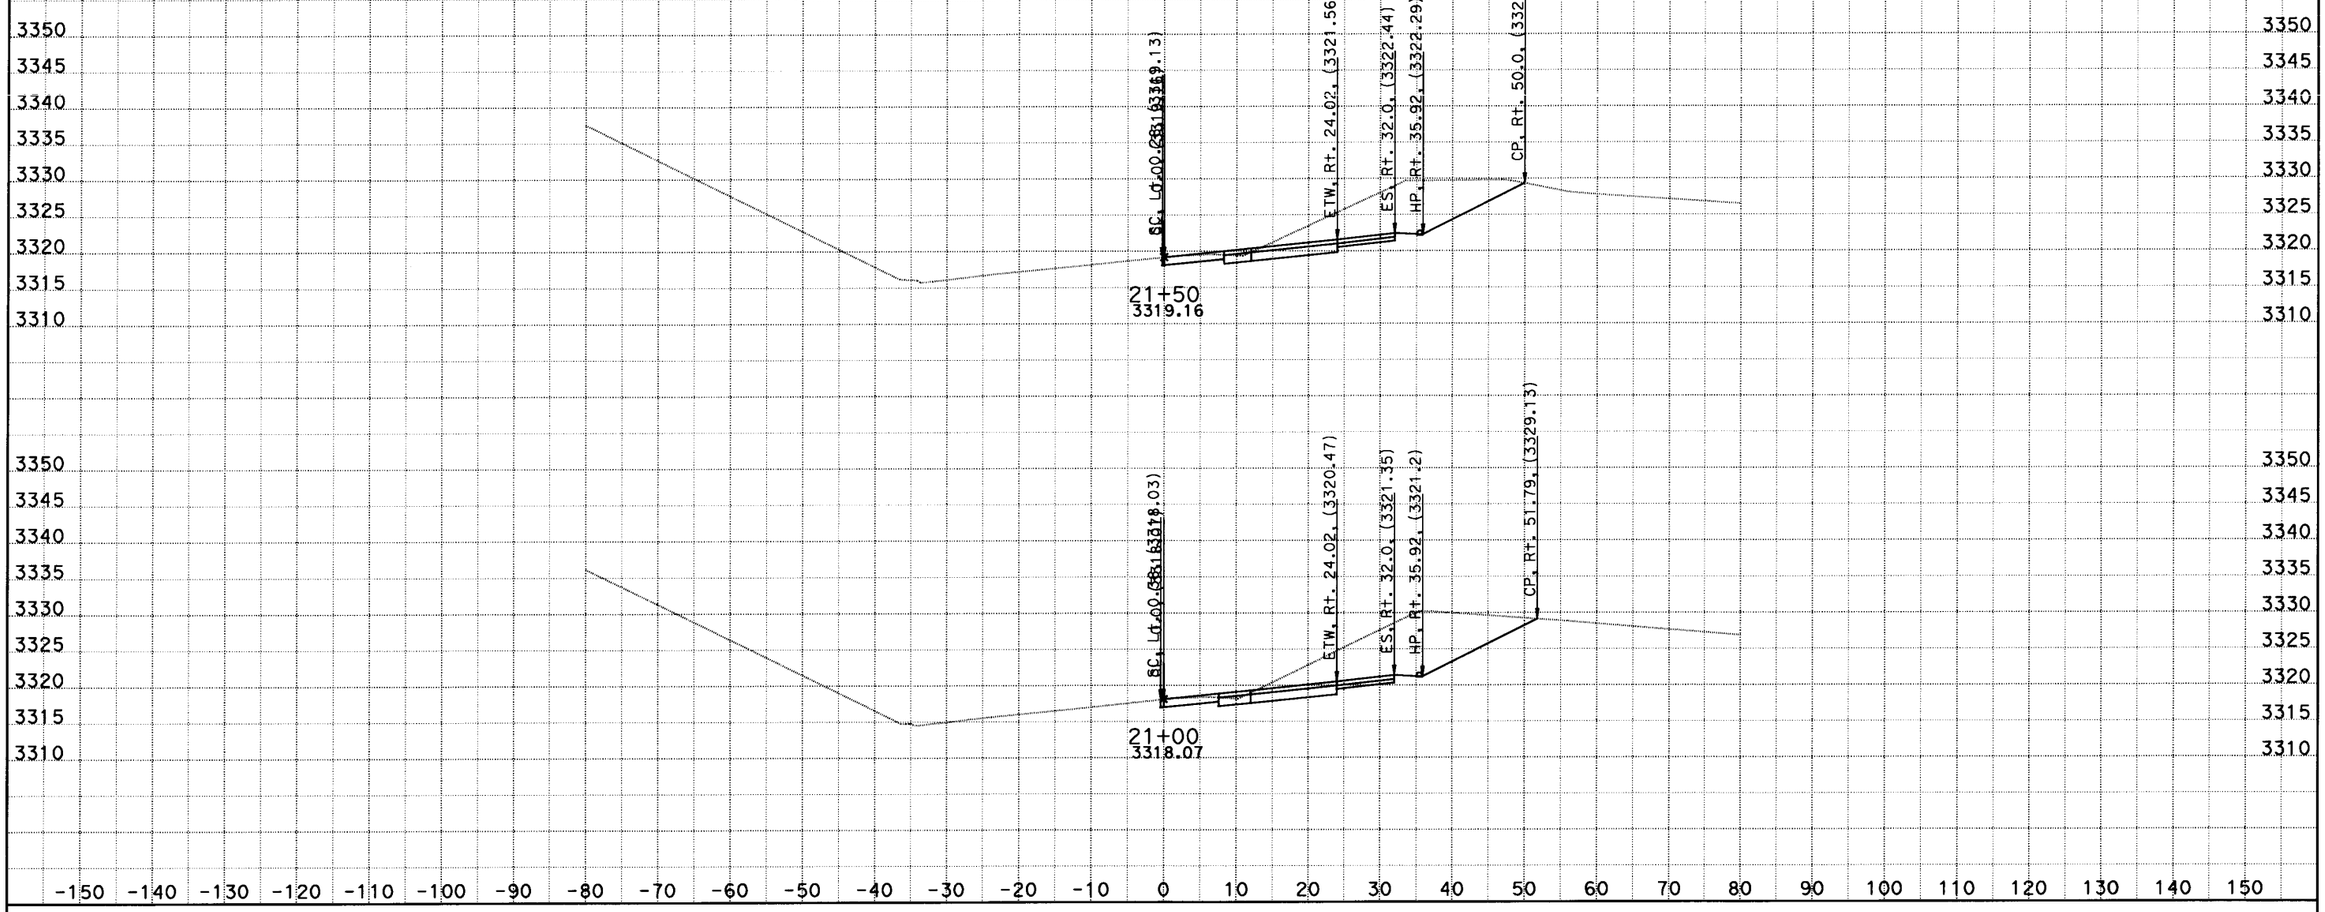

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 13 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

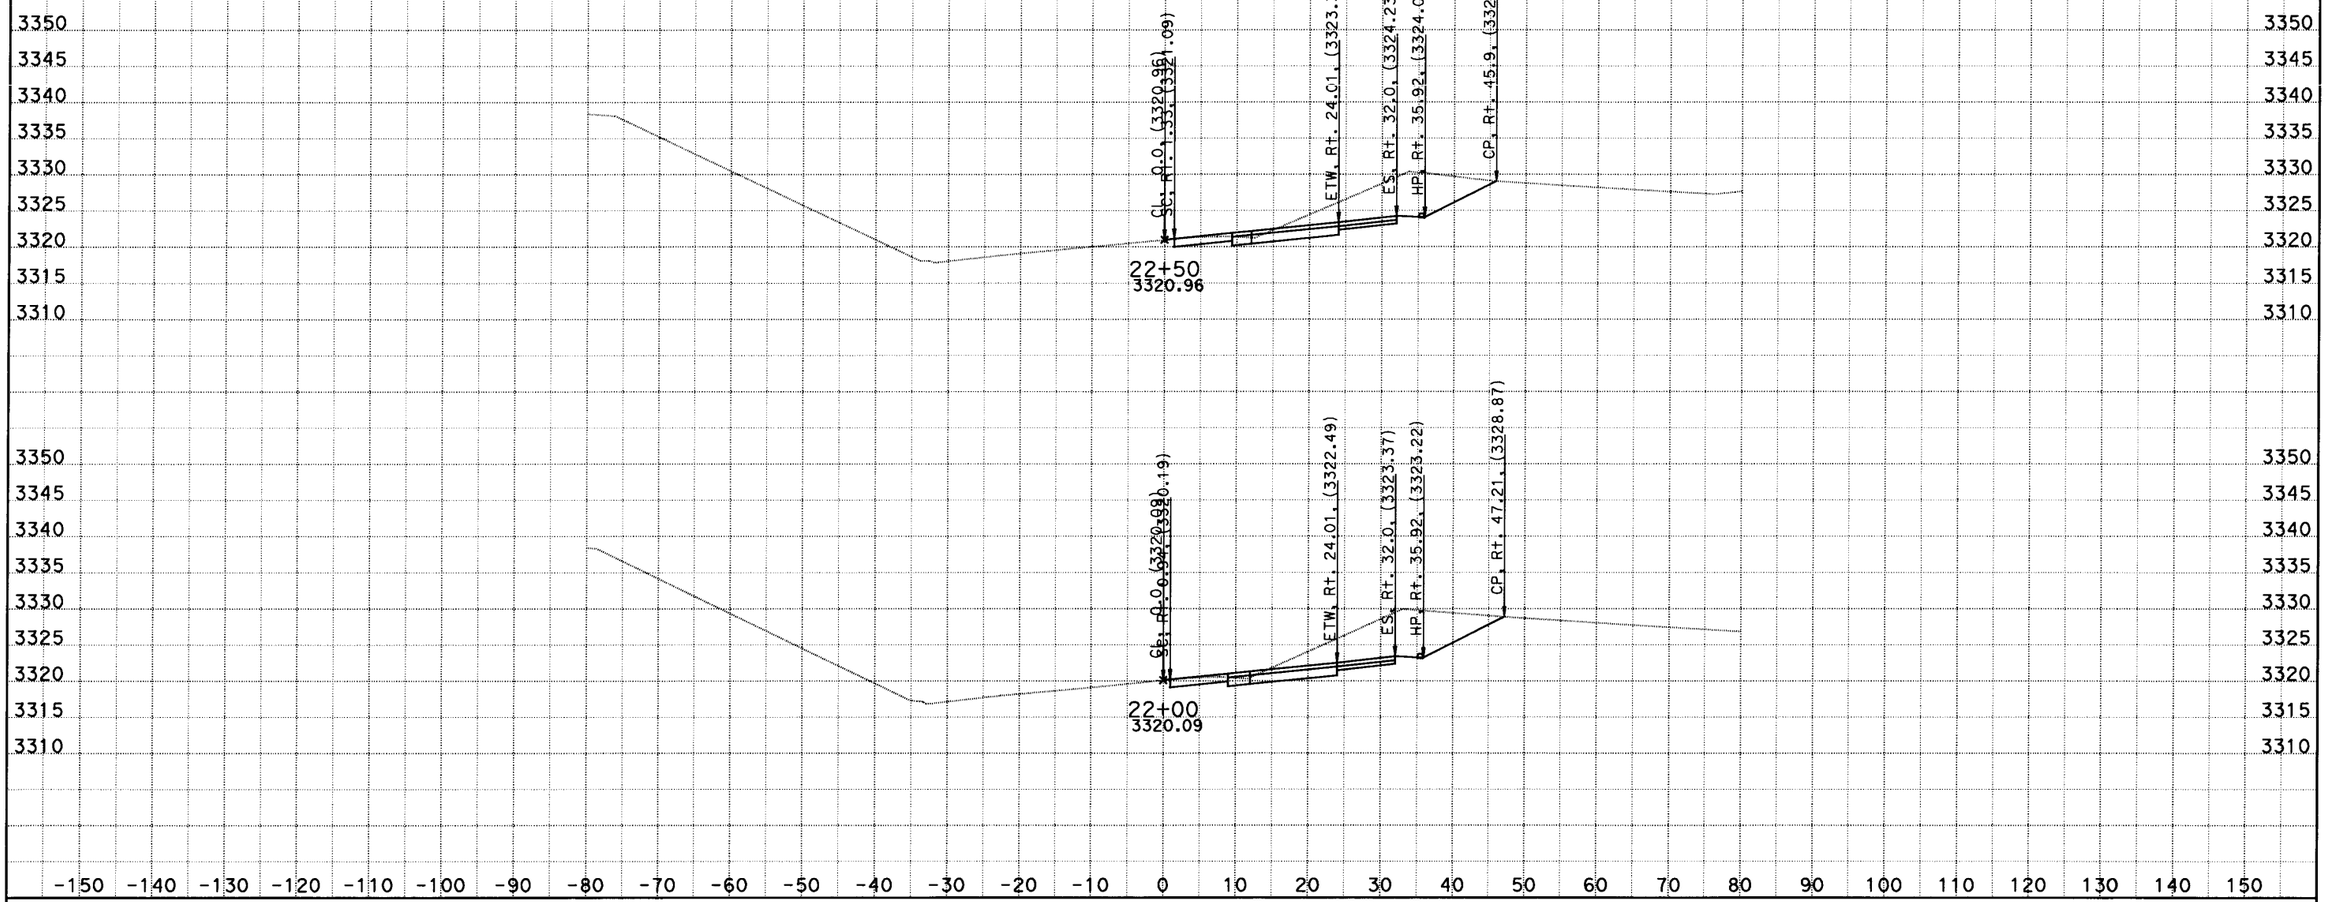

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 14 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

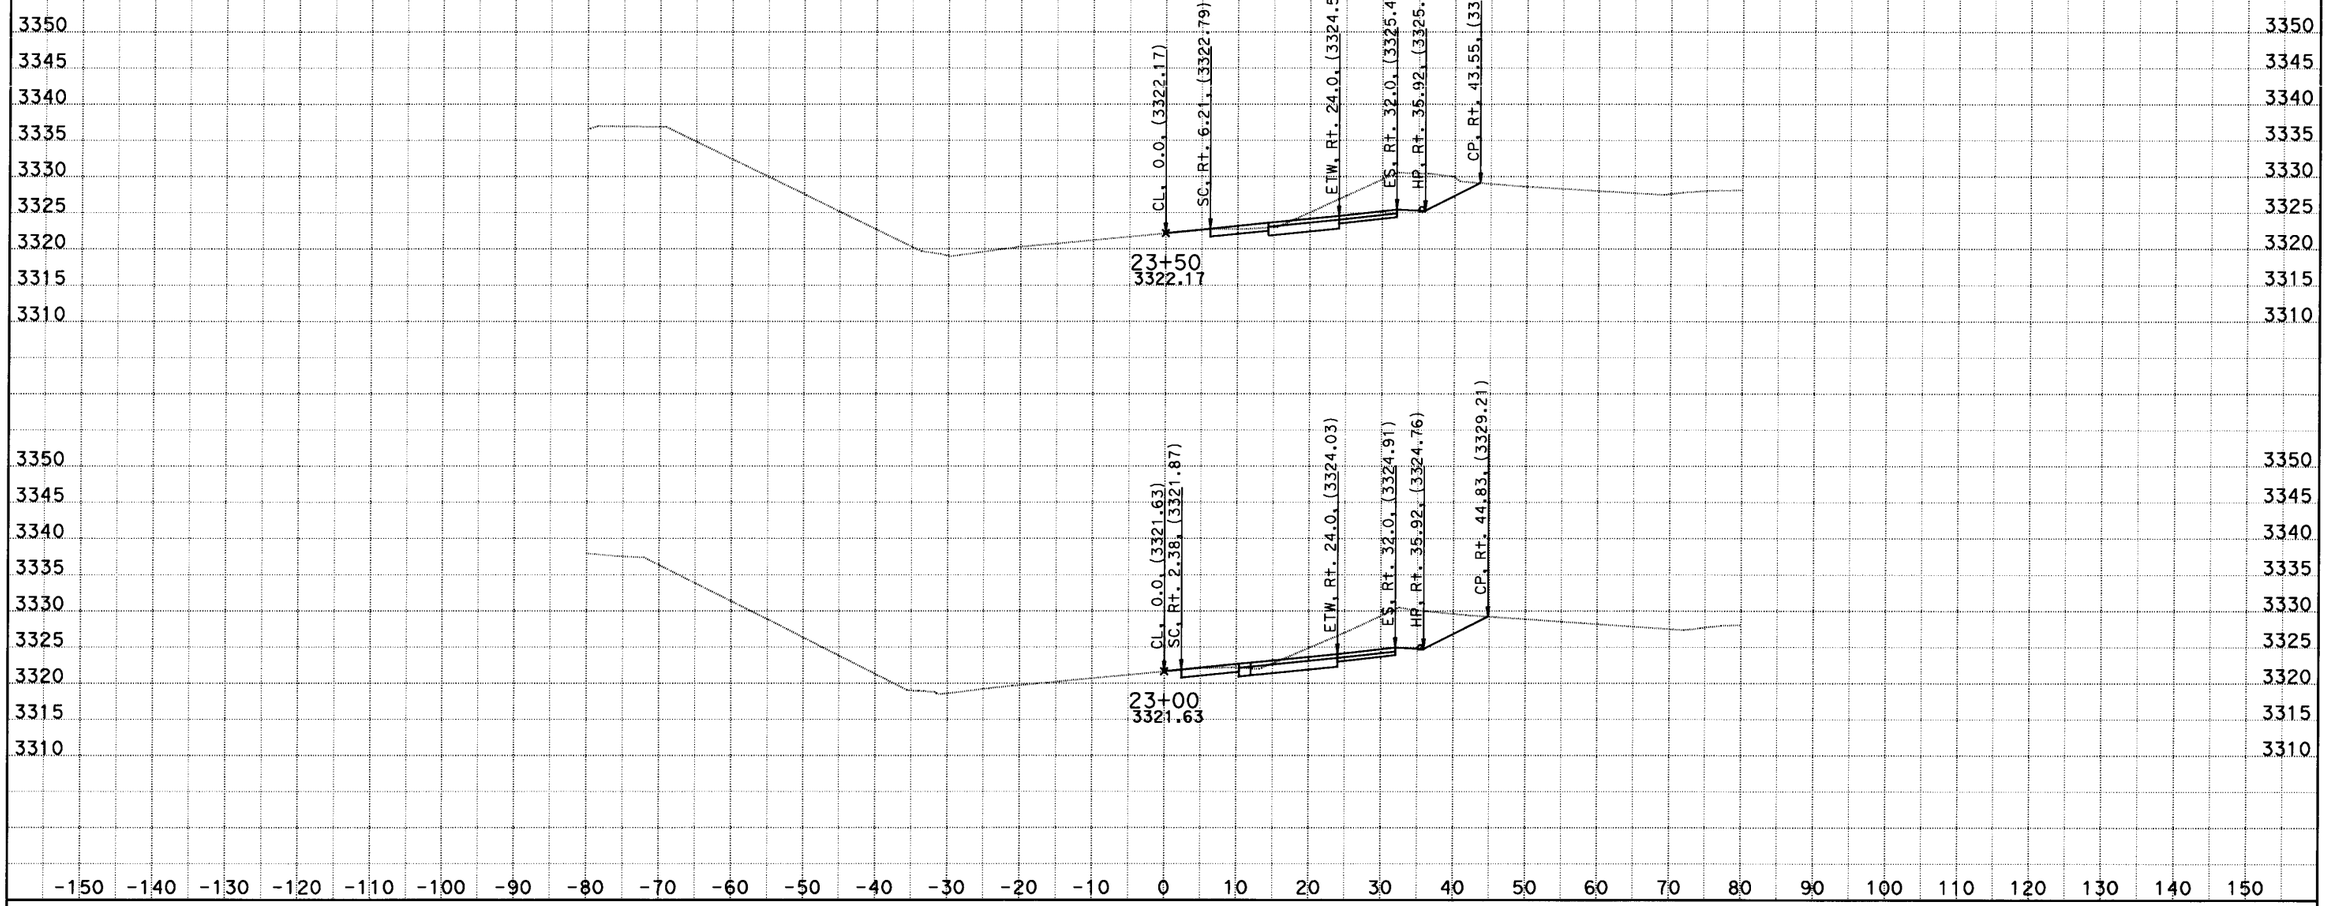

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 15 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

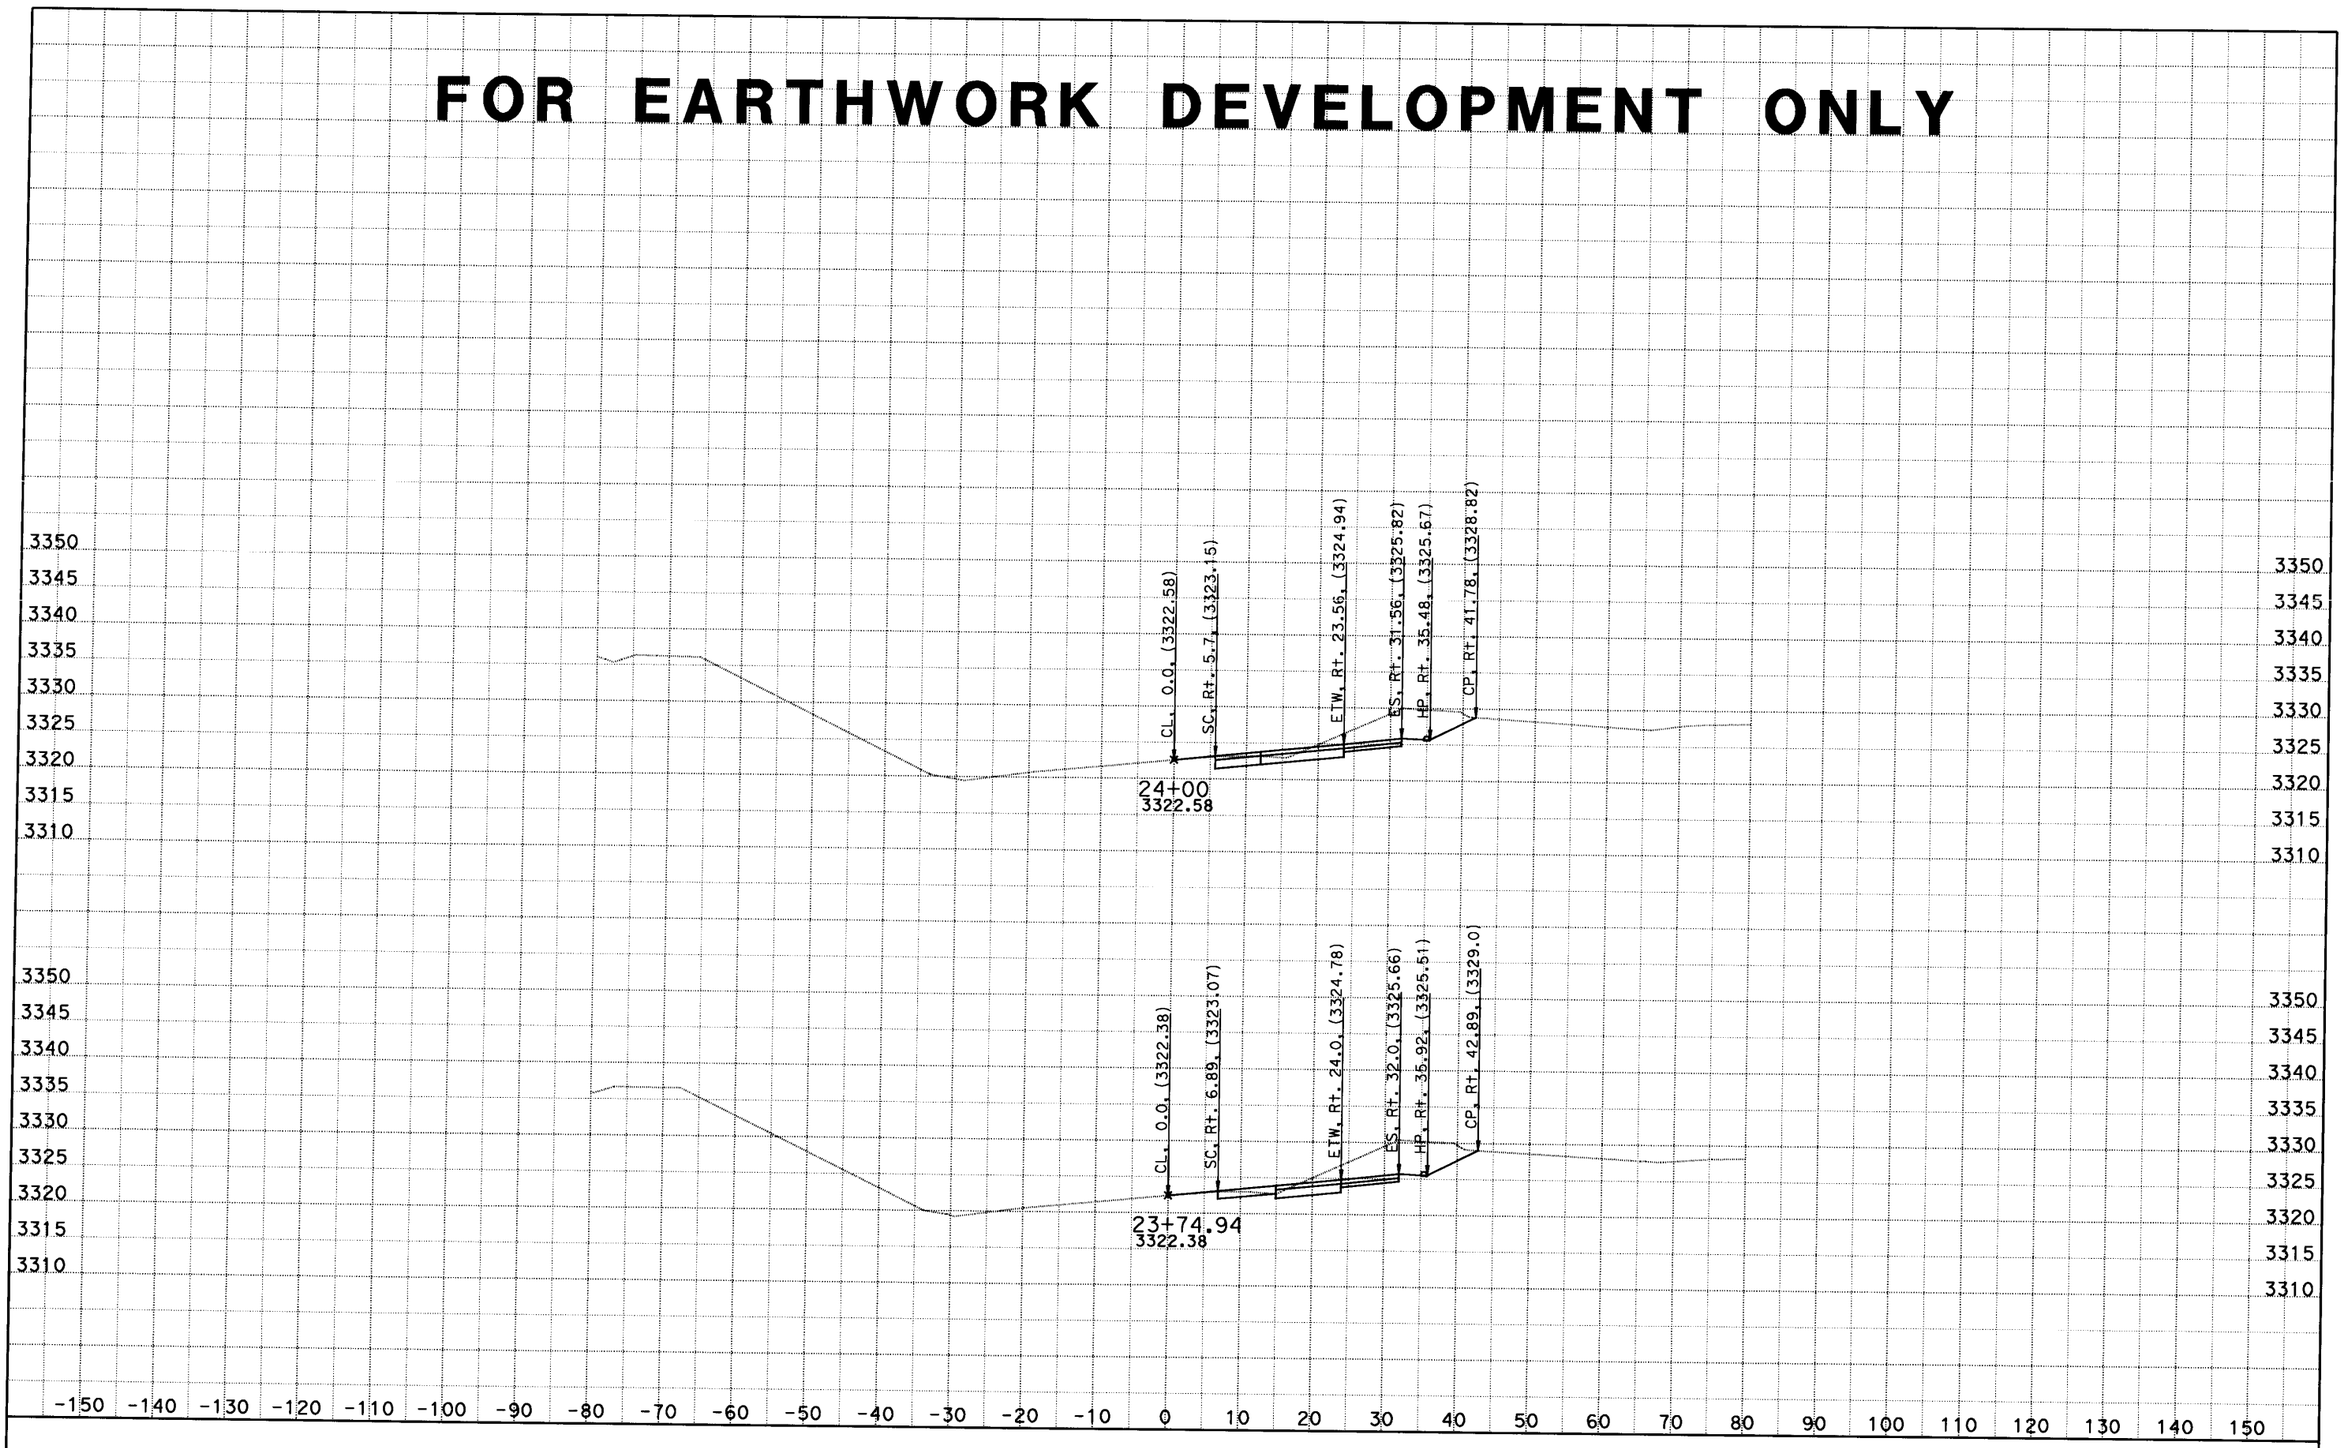

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 16 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

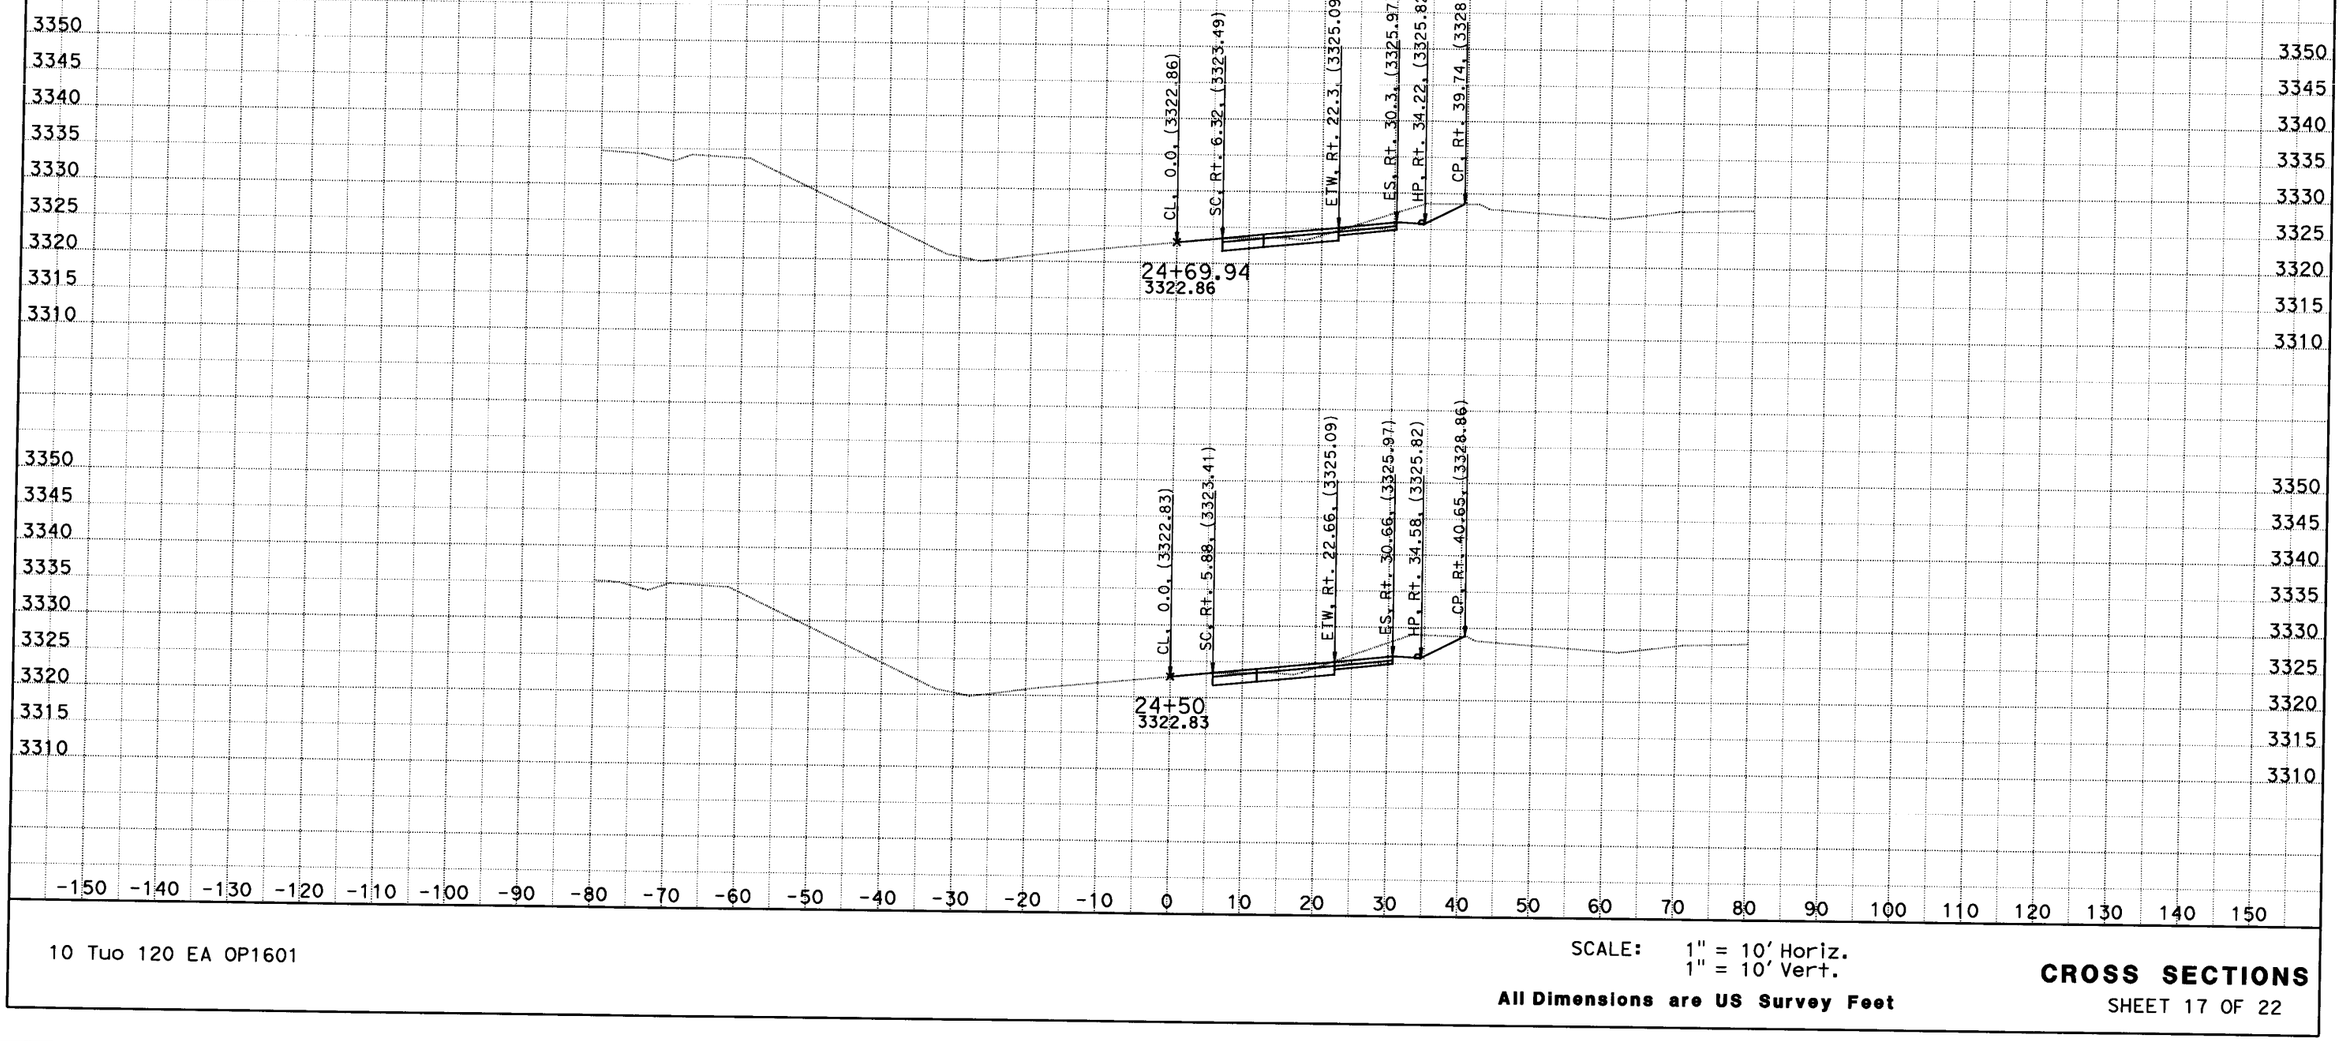

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 17 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

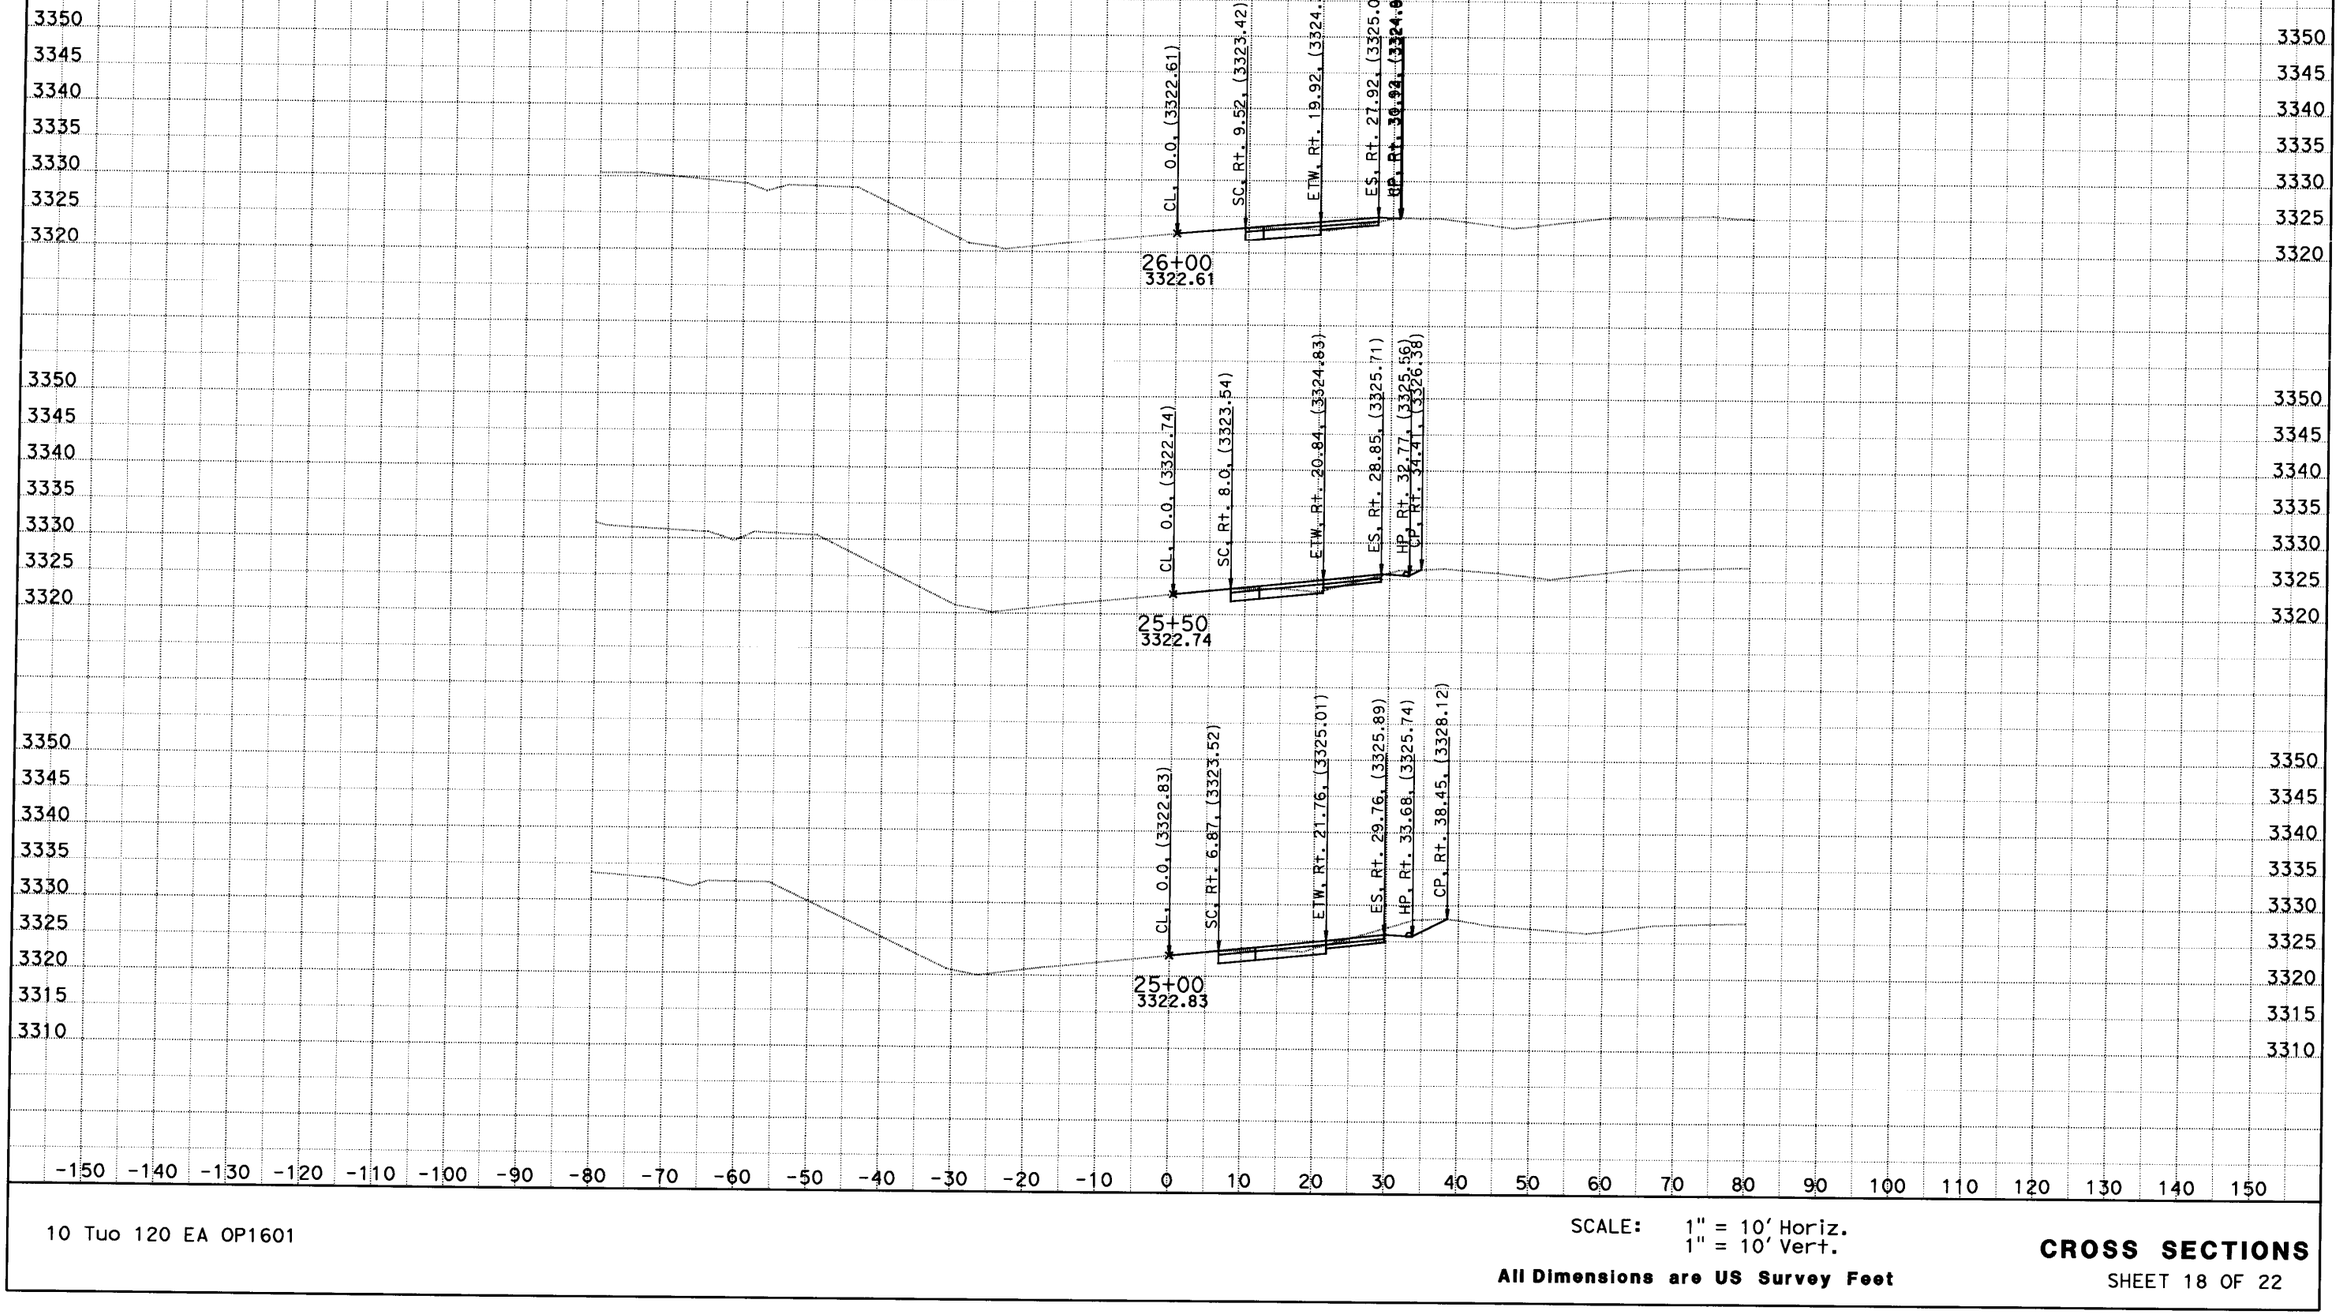

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 18 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

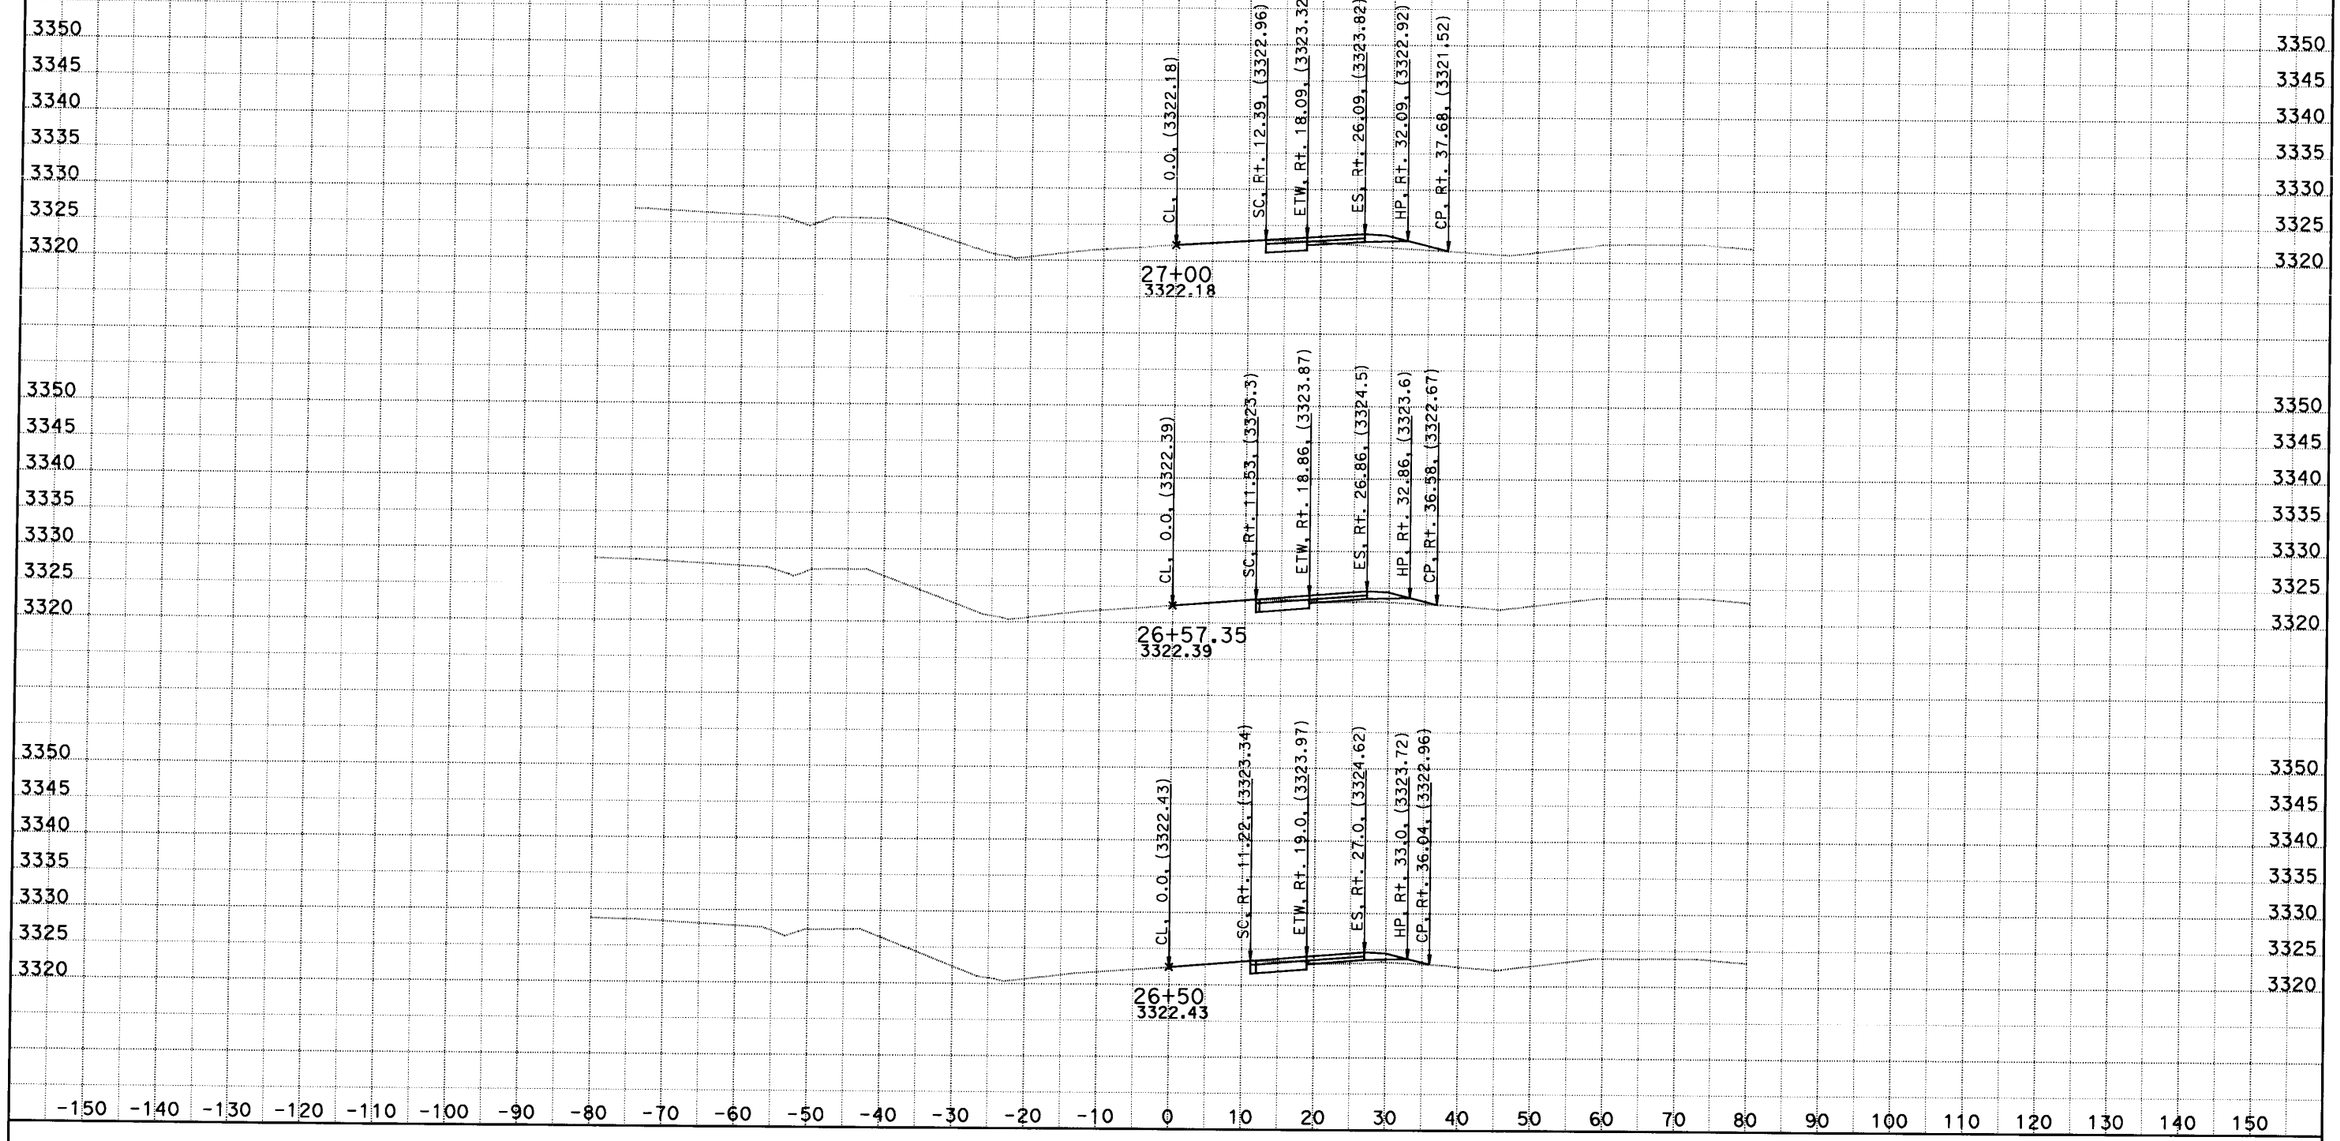

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 19 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

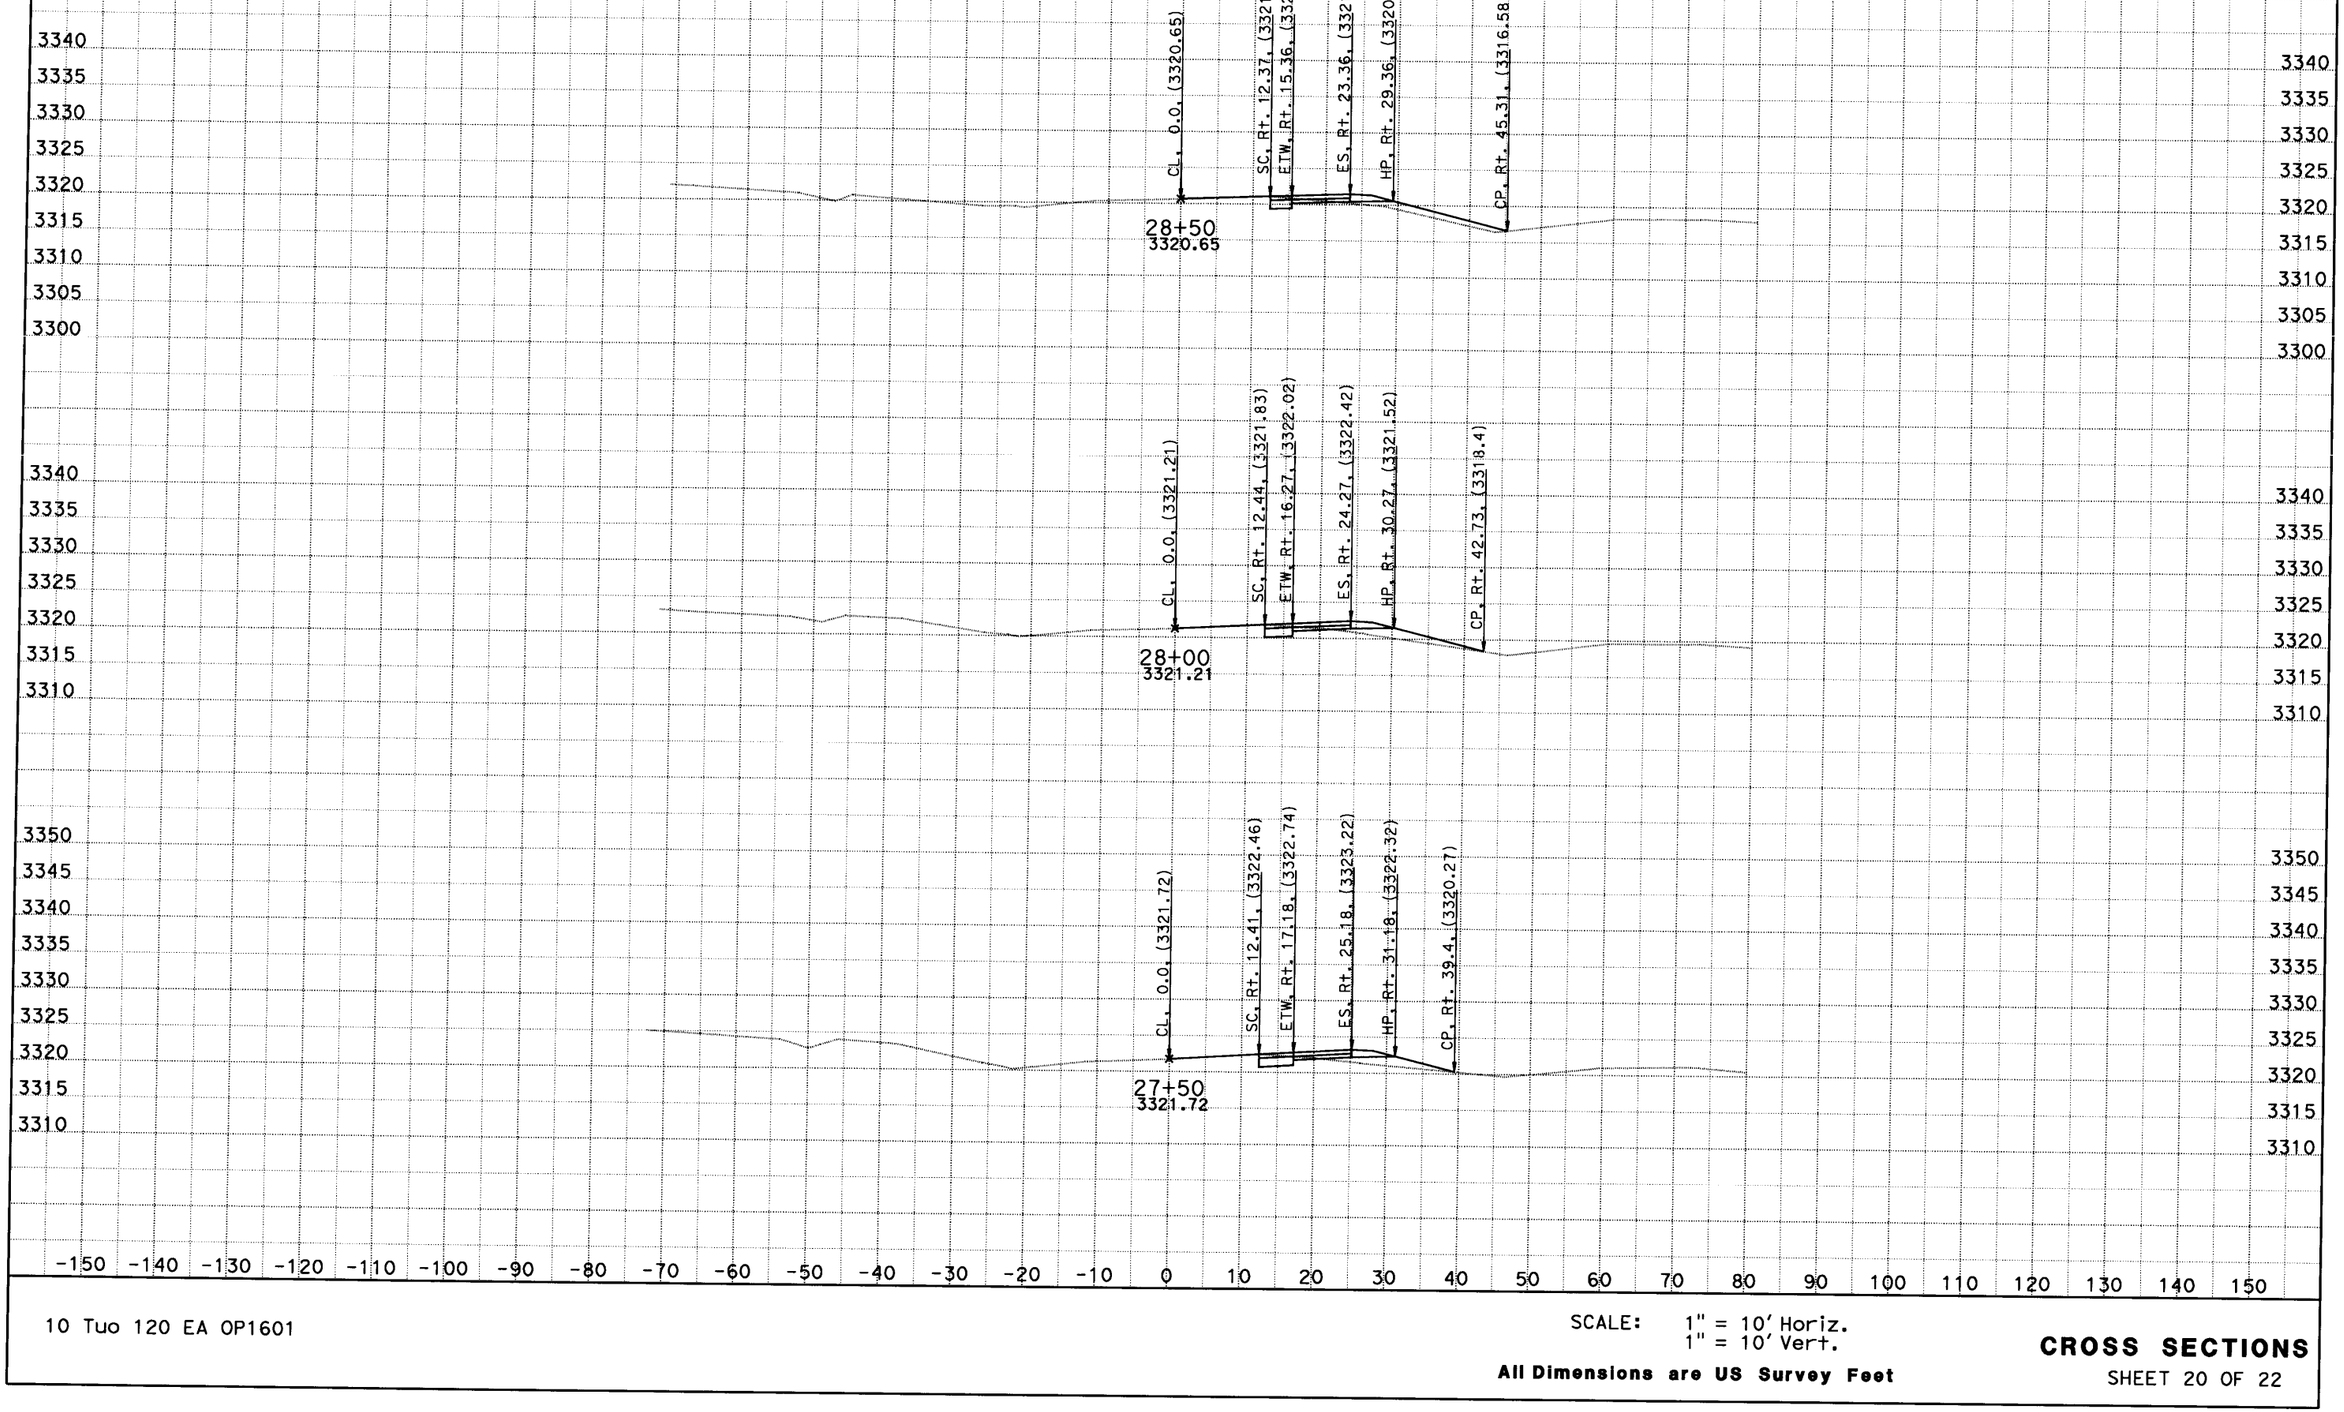

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 20 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

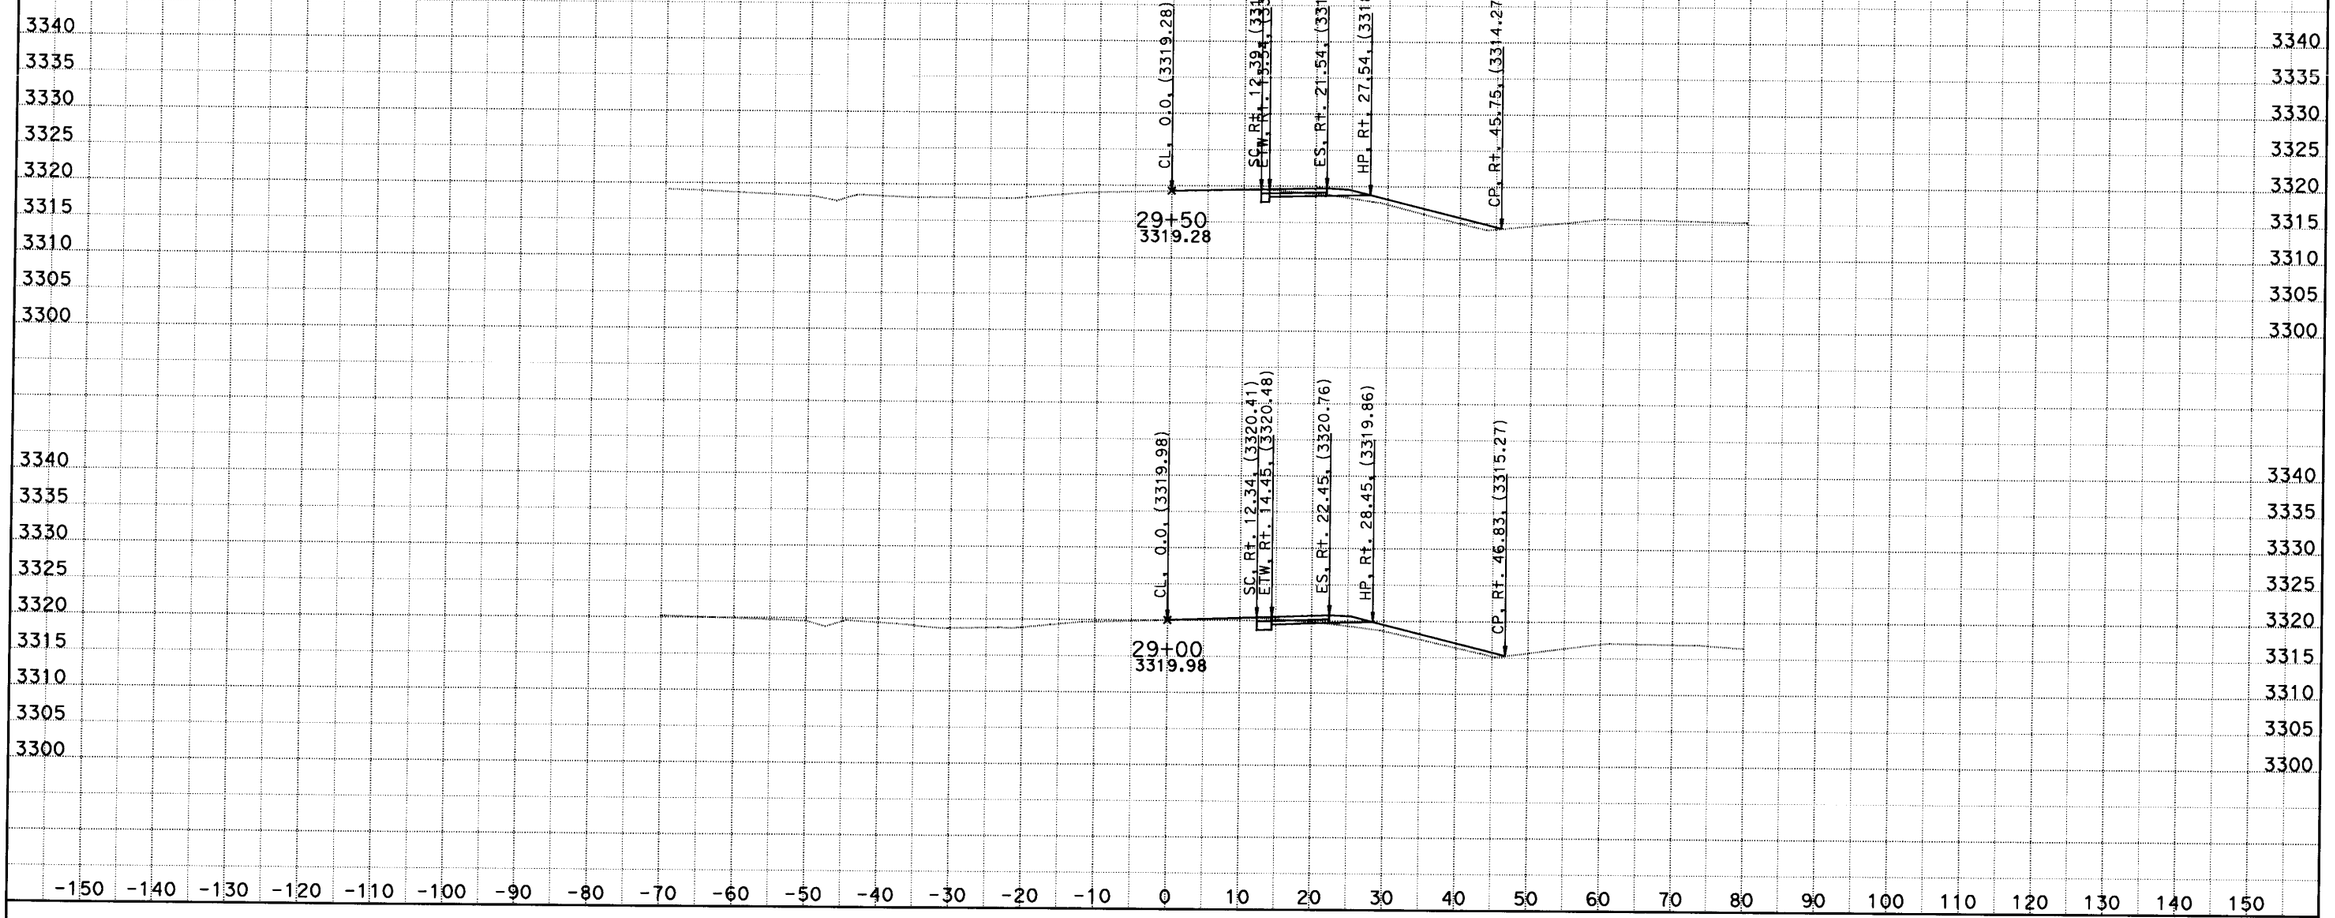

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 21 OF 22

FOR EARTHWORK DEVELOPMENT ONLY

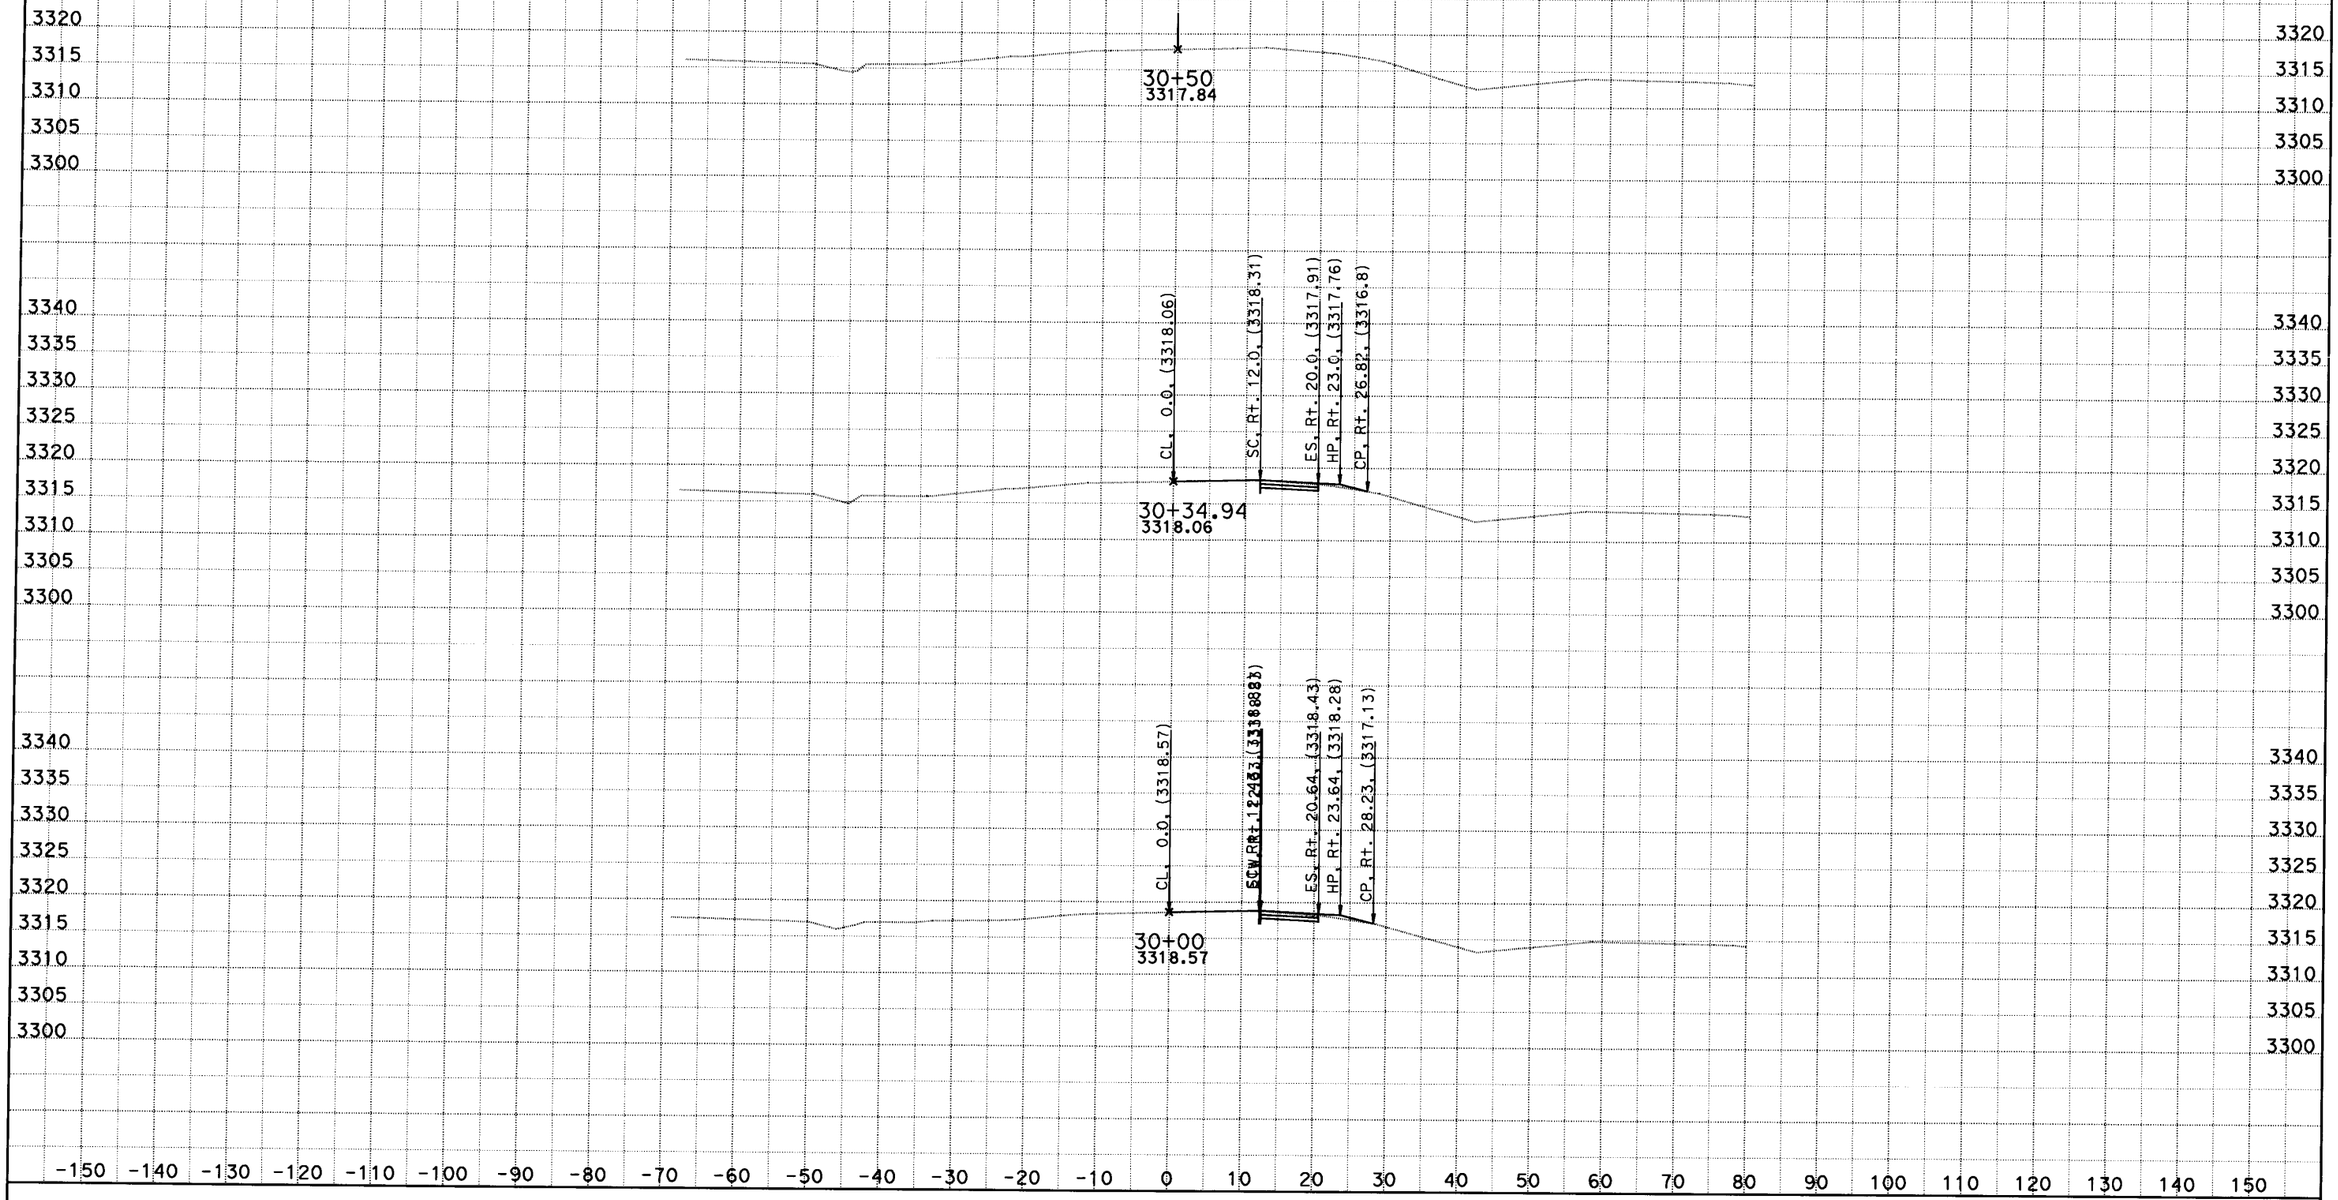

10 Tuo 120 EA OP1601

SCALE: 1" = 10' Horiz.
1" = 10' Vert.

All Dimensions are US Survey Feet

CROSS SECTIONS

SHEET 22 OF 22